

AQUAWELLE

AR 477 SU FİLTRELİ
ELEKTRİKLİ SÜPÜRGE

KULLANMA KILAVUZU

ARZUM®



3YIL
ARZUM GARANTİSİ

AQUAWELLE AR 477 WATER FILTERED VACUUM CLEANER



- 1- Carrying handle
- 2- Telescopic Tube
- 3- Hose
- 4- Body holding handle
- 5- On / Off switch
- 6- Power adjustment button
- 7- Cord rewinding button
- 8- Big Wheels
- 9- Small Wheels

- 10- Dust Reservoir
- 11- Cleaning nozzle adjustable according to the floor type
- 12- Tube with narrow nozzle
- 13- Round small brush
- 14- Armchair Brush
- 15- Turbo Brush
- 16- X Cross Filter/Hepa Filter

Thank you for having selected the **Arzum** branded **vacuum cleaner**. This product is also one of the products which we have provided for you in order to make life easier:

Please read carefully this user's manual in order to get the best performance from your product, and keep it for your further reference.

IMPORTANT SAFEGUARDS

- Make sure that the voltage indicated on **AquaWelle Water Filtered Vacuum Cleaner** corresponds with the voltage in your home. Our company shall not be held liable for any failures owing to any discrepancy and such failures shall not be covered by the guarantee.

- Your appliance has been designed for household use only. Do not use for commercial or industrial purposes. Otherwise, it shall not be covered by the guarantee.

- Your close supervision is necessary when the appliance is used by children, people having insufficient experience and knowledge, physically (audio, visual) or mentally handicapped people. Make sure that children do not play with the appliance.

- To prevent harming your appliance, do not use extension cords that supply insufficient current.

- Unplug your appliance **ABSOLUTELY** after use, before mounting the accessories, performance of cleaning and maintenance.

- Do not operate your appliance without water in the reservoir.

- Do not use harmful chemicals and abrasive cleaners in order to clean your appliance.

CAUTION: Do not use your appliance for absorbing any flammable liquids such as gasoline, thinner, alcohol, kerosene, etc. as well as abrasive liquids (such as acids, etc.). Do not let your appliance to absorb burning cigarettes, active cigarette ashes or matchsticks.

- Ensure not to move the appliance over its cord, which may damage the insulation of the unit.

- Do not carry your appliance by its cord.

- To unplug, grasp plug and pull from the power outlet. Never pull the cord.

- Do not attempt to remove the mains plug when your hands are wet.

- Do not operate your appliance vertically.

- Keep away your appliance from direct heat sources as hot stove, burner or in a heated oven.

- Never immerse your unit into water, and prevent from spilling out any water, on the appliance.

- Hold the plug in your hand while rewinding the cord and prevent the plug to hit and to be wrapped around the body.

- Never hold suctioning nozzle near the eyes and ears while operating your appliance.

- While operating your appliance, keep away hair, loose clothes, fingers etc. parts of your body from nozzle of the appliance.
- Do not attempt to remove sharp objects such as glasses, etc. through your appliance.
- Special care is required especially for cleaning the stairs. Be careful mains plug not to be squeezed to the corners, door thresholds, not to be cut and scraped by sharp objects.
- When plugging in or out make sure that the appliance is switched off.
- If you are in doubt that the cord or plug is damaged, or that your appliance malfunctions in any manner whatsoever; including dropping down, etc. , never start up your appliance, nor repair it by yourself. Take it to the nearest **Arzum Authorized Service**.
- Contact your **Arzum Authorized Service** for repair; and spare parts, and use original spares and accessories only.
- Use your device as recommended and for its intended purposes.

SPECIFICATIONS OF ACCESSORIES OF ARZUM AQUAWELLE WATER FILTERED VACUUM CLEANER AND THEIR INTENDED USE

Preparation for Use

- 1- Remove the water reservoir from the appliance by holding it from its holding handle by pressing the locking button.
- 2- Remove the oblique filter unit with two locking buttons.
- 3- Fill the water reservoir with tap water up to the **MAX** indicator.

Required water quantity is 550 cc. Replace the filter inside the water reservoir by aligning it carefully.

Put water reservoir into place again.

- 4- Connection of Appliance


Pass vacuum nozzle onto the hose.



Placing the extension tubes and accessories

a. Placing the extension tube into handle.


b. Placing the extension tubes.

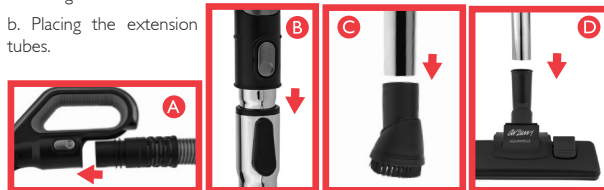

c. Placing the brush into the extension tube

d. Placing surface nozzle

Ideal for daily cleaning of hard surfaces and carpets.

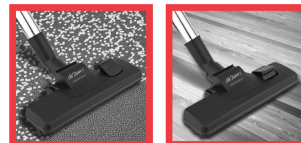

Operating Accessories

Tube with narrow nozzle and cleaning nozzle are stored in the accessory storage partition.

Tube with narrow nozzle:

- It is intended for use in the places such as radiators, narrow areas, corners, wall borders and armchair cushions intervals etc.



Round small brush:

- It is intended for use in the areas such as furniture, window blinds, book shelves, lampshade orders etc.



Turbo Brush:

- Turbo brush has a rotating brush system which operates with air flow. The parts on the surface which you clean with rotating action of the brush are taken easily. Furthermore, materials such as yarn, fiber on the carpet or surface are cleaned more easily thanks to the brush.



- Do not use the turbo brush unnecessarily in the cleaning of a definite area. While the turbo brush is used, move towards flow direction of feathers, otherwise, your carpet can damage.
- In the event that any blockage occurs in the brush or channel during the cleaning of small parts, turn off your vacuum cleaner immediately, and clean the parts which cause blockage.
- **NEVER** touch the rotating brush while turbo brush is used.
- You can increase the performance of brush by cleaning the yarns, hair and parts in the brush regularly; First of all, turn off your vacuum cleaner; remove the brush from the telescopic tube, and then, clean the nozzle of turbo brush.

Cleaning Nozzle Adjustable According to the Floor Type

- It is used for dry cleaning of both hard and soft surfaces. You can clean the hard surfaces with the brush placed outside, and the soft surfaces, such as carpets etc., with the brush placed inside. Ensure that the brush gets in or goes out by pressing the button on the cleaning nozzle.



OPERATION

- Draw the cord of your appliance outwards and then, bring it to the suitable length and plug in.



- Press on/off switch, your appliance shall start to operate.

- In order to adjust the suction power, adjust it by turning the speed button.



- Your appliance will start to operate with soft-start feature which is the first operation feature of engine. Adjust the suction power according to the surface which you will clean. If the water is very dirty, change it according to the instructions in the section of "Water reservoir discharging and cleaning". Suction power of the appliance will decrease when the water gets dirty much. At the same time, engine of the appliance will also turn more quickly and noisily. It is a warning which reminds this user that the appliance should be turned off. In order to continue the cleaning, comply with the instructions in the section of "Water reservoir discharging and cleaning" and add water into the water reservoir again.

Water Reservoir Cleaning and Discharging

- Turn off the appliance from the button, and unplug the cord. This precaution resets the safety of appliance at the same time.

- Discharge the water by holding your appliance from the handle. Discharge the dry reservoir by drawing the locking



- button, and then, turn off it. Remove the filter part, and discharge the water reservoir by taking its nozzle laterally.

- Filter part can be separated and rinsed by two locks.
- Fill the water, and leave HEPA filter for drying before replacing it again.



- Disassemble the filter casing, and place it into the appliance again, and remove your appliance.

Note: Water inside the reservoir will not damage your appliance; it is recommended to discharge the water only before removing your appliance. One of the important advantages of this appliance is the fact that you can store your appliance with clean reservoir instead of dirty dust reservoir as well as vacuum cleaners with dust bags.

Automatic Cord Rewinding Button

- Before removing your appliance, rewind the cord by pressing the cord rewinding button.



Care and Cleaning

- **ALWAYS** unplug your mains cable from the wall socket, before attempting any care process of your appliance.

Replacing or cleaning the Filters

HEPA Air Outlet Filter:

• Hepa filter ensures better cleaning conditions for those suffering respiratory-track illness, children, and those suffering allergy. Hepa filter is a useful device with superior properties.



- Hepa filter should be replaced at least one time a year.
- Take cover of Hepa filter on the top part of your appliance.
- Remove Hepa filter and replace the new filter.
- Turn off Hepa filter cover.

IMPORTANT:

- Apply to Arzum Authorized Service for replacement of the filters.
- **NEVER** use your appliance without attaching the filters.

EASY TO CARRY AND STORE

• You can easily carry and store your appliance by affixing the extensions of the apparatus located on the telescopic tube, onto the channels on the appliance.



Product Life: 10 years

Technical Specifications:

220- 240 V ~ 50 Hz

1600 W

Insulation class: II

The product is in compliance with the **EEE Directives.**

WEEE

This product contains recyclable materials that compliance with the WEEE directives. Do not dispose this product as unsorted municipal waste. Please contact your local municipality for the nearest collection point.



Manufacturer / Importer:

Arzum Elektrikli Ev Aletleri San. ve Tic. A.Ş.

Otakçılar Caddesi No: 78 Kat: 1 B Blok No: B1b

Eyüp 34050 İstanbul Türkiye

Made in P.R.C

Tel: +90 212 467 80 80 Fax: +90 212 467 80 00

GARANTİ ŞARTLARI

1. Garanti süresi, malın teslim tarihinden itibaren başlar ve 3 yıldır.
2. Malın bütün parçaları dahil olmak üzere tamamı Firmamızın garantisi kapsamındadır.
3. Malın garanti süresi içerisinde anılanması durumunda, tamirde geçen süre garanti süresine eklenir. Malın tamir süresi en fazla 20 iş gündür. Bu süre, mala ilişkin anzanın servis istasyonuna, servis istasyonunun olmaması durumunda, malın satıcısı, bayi, acentası, temsilciliği, ithalatçısı veya imalatçısı-üreticisinden birisine bildirim tarihinden itibaren başlar. Malın anzasının 10 gün içerisinde giderilememesi halinde imalatçı-üretici veya ithalatçı malın tamiri tamamlanuncaya kadar; benzer özelliklere sahip başka bir malı tüketicinin kullanımına tahsis etmek zorundadır.
4. Malın garanti süresi içerisinde gerek malzeme ve işçilik, gerekse montaj hatalarından dolayı anılanması halinde, işçilik masrafı, değiştirilen parça bedeli ya da başka herhangi bir ad altında hiçbir ücret talep etmeksizin tamiri yapılacaktır.
5. Tüketicinin onarım hakkını kullanmasına rağmen malın;
 - Tüketicie teslim edildiği tarihten itibaren, belirlenen garanti süresi içinde kalmak kaydıyla, bir yıl içerisinde; en fazla dört defa veya belirlenen garanti süresi içerisinde altı defa anılanmasının yanı sıra, bu anzanların maldan yararlanamamayı sürekliliği,
 - Tamiri için gereken azami süresinin aşılması,
 - Satın alma tarihi 30 gününü geçmemiş olan cihazın anzalı olması
 - Firmanın servis istasyonunun, servis istasyonunun mevcut olmaması halinde sırayla satıcısı, bayi, acentesi temsilciliği ithalatçısı veya imalatçı-üreticisinden birisinin düzenleyeceği raporla anzanın tamirini mümkün bulunmadığının belirlenmesi, durumlarında tüketici malın ücretsiz değiştirilmesini, bedel iadesi veya ayp oranda bedel indirimi talep edebilir.
6. Malın kullanma kılavuzunda yer alan hususlara aykırı kullanılmasından kaynaklanan anzalar garanti kapsamı dışındadır.
7. Garanti Belgesi ile ilgili olarak çıkabilecek sorunlar için Gümrük ve Ticaret Bakanlığı Tüketicinin Korunması ve Piyasa Gözetimi Genel Müdürlüğü'ne başvurulabilir.

AQUAWELLE
AR 477 SU FİLTRELİ ELEKTRİKLİ SÜPÜRGE

ARZUM®

GARANTİ BELGESİ

BELGE NO: 81835

BELGE ONAY TARİHİ: 13/04/2012

İMALATÇI VEYA İTHALATÇI FIRMA

UNVAN : ARZUM ELEKTRİKLİ EV ALETLERİ SAN. VE TİC. A.Ş.

ADRES : OTAKÇILAR CADDESİ NO: 78 KAT: 1 B BLOK NO: B1b
34050 EYÜP-İSTANBUL

TEL : (0212) 467 80 80 FAKS: (0212) 467 80 00

FİRMA YETKİLİ İMZASI:

**ARZUM ELEKTRİKLİ
EV ALETLERİ SAN. VE TİC. A.Ş**

ÜRÜNÜN CİNSİ : SU FİLTRELİ ELEKTRİKLİ SÜPÜRGE

MARKASI : ARZUM

MODELİ : AQUAWELLE

TYPE NO : AR 477

BANDROL VE SERİ NO :

TESLİM TARİHİ VE YERİ :

GARANTİ SÜRESİ : 3 YIL

AZAMI TAMİR SÜRESİ : 20 İŞ GÜNÜ

SATICI FIRMA

UNVAN :

ADRES :

TEL - FAKS :

FATURA TARİH VE NO :

TESLİM TARİHİ VE YERİ :

TARİH, İMZA VE KAŞE :

Bu belgenin kullanılmasına; 4077 sayılı Tüketicinin Korunması Hakkında Kanun ve bu Kanun'a dayanılarak yürürlüğe konulan Garanti Belgesi Uygulama Esaslarına Dair Tebliğ uyanca, Gümrük ve Ticaret Bakanlığı Tüketicinin Korunması ve Piyasa Gözetimi Genel Müdürlüğü tarafından izin verilmiştir.

ARZUM®

ARZUM DANIŐMA MERKEZİ

444 1 800

GENEL DAĐITICI

ARZUM ELEKTRİKLİ EV ALETLERİ SAN. VE TİC. A.Ő.

Otakçılar Caddesi No: 78 Kat: I B Blok No: B1b

Eyüp 34050 İstanbul Türkiye

Tel: (0212) 467 80 80 Faks: (0212) 467 80 00

www.arzum.com arzum@arzum.com

AR477-190613

CE