

ELEPHANT

TR **Kullanım Kılavuzu**
Su Filtreli Kuru
Vakum Süpürgesi

GB **Instruction Manual**
Water Filtered Dry
Vacuum Cleaner



Genel	3
Kullanma talimatları hakkında bilgi	3
Sorumluluk	3
Güvenlik önemlidir.....	3
Kullanma talimatları hakkında uyarılar	3
Güvenlik Uyarıları	4
CE Uygunluk Deklarasyonu	4
Kullanım Alanı	4
Yetkisiz Kullanım.....	4
Güvenlik Uyarıları.....	5
Kurulum	7
Kutuyu Açma ve İlk Kullanım.....	7
Ürün Tanıtımı	8
Teknik Bilgiler	8
Kullanım	9
Kullanım öncesi hazırlık	9
Cihazı Kullanım	9
Üfleme Özelliği.....	9
Kullanım Sonrası	10
Cihaz Bakım ve Temizlik	10
Geri Dönüşüm.....	12
Sevk.....	12

Uzun yıllar sorunsuz çalışması için tasarlanan ve üretilen Fakir Elephant Su Filtreli Kuru Vakum Süpürgesi'ni satın aldığınız için teşekkür ederiz.

Kullanma talimatları hakkında bilgi

Benzer ürünleri kullanmaya alışık olabilirsiniz, ancak kullanma kılavuzunu okumak için lütfen zaman ayırınız. Bu kılavuz satın almış olduğunuz üründen en iyi performansı almanız için hazırlanmıştır.

Sorumluluk

Bu kullanım kılavuzundaki talimatlara uygun olmayacak şekilde kullanım sonucunda ortaya çıkabilecek bir hasar oluşması durumunda ve cihazın, kendi alanı dışında bir yerde kullanılması, Fakir yetkili servislerinden başka bir yerde tamir ettirilmesi durumunda Fakir Elektrikli Ev Aletleri Dış Tic. A.Ş., sorumluluk kabul etmez.

Güvenlik Önemlidir

Kendi güvenliğiniz ve diğerlerinin güvenliği için ürünü çalıştırmadan önce kullanma kılavuzunu okuyunuz. Bu kılavuzu ilerideki kullanımlar için güvenli bir yerde saklayınız. Eğer cihazınızı birisine veriyorsanız, kullanma kılavuzunu da veriniz. Bütün paketleri sökünüz, fakat cihazınızın çalıştığından emin olana kadar da paketleri saklayınız.

Kullanma talimatları hakkında uyarılar



UYARI!

Bu işaret yaralanma ya da ölümlle sonuçlanabilecek tehlikeleri belirtir.



DİKKAT!

Bu işaret ürününüzün zarar görmesi ya da bozulmasına yol açabilecek tehlikeleri belirtir.



NOT!

Kullanım kılavuzunda önemli ve faydalı bilgileri belirtir.

CE uygunluk deklarasyonu

Bu cihaz Avrupa Birliği'nin 2004/108/EC Elektromanyetik Uyumluluk ve 2006/95/EC Gerilim Direktifleri'ne tamamen uygundur. Bu ürün cihaz tip etiketinde CE işaretiyle sahtedir.

Kullanım Alanı

Ürün modeli ev tipi kullanım için tasarlanmıştır. Aksi kullanım ile üründe oluşan herhangi bir arıza durumunda yetkili servislerimiz garanti kapsamı dışında hizmet verecektir.

Yetkisiz Kullanım

Aşağıda belirtilen yetkisiz kullanım durumlarında, cihaz zarar görebilir ya da yaralanmaya yol açabilir; Bu cihaz akli dengesi yerinde olmayan kişilerin ya da bu tip cihazları kullanmak için yeterli bilgisi olmayan kişilerin kullanması için uygun değildir. Bu tip kişilerin cihazı kullanmasına kesinlikle izin vermeyiniz. Cihaz bir oyuncak değildir. Bundan dolayı çocukların bu cihazı kullanmalarına izin vermeyiniz ve cihazı çocukların yanında kullanırken daha dikkatli olunuz.

Güvenlik Uyarıları


- Elektrikli bir cihaz kullanılırken, aşağıdaki önlemler her zaman alınmalıdır. Yangın, elektrik çarpması ve kişisel yaralanmaları engellemek için;
- Bu cihaz sadece hafif ev ve ofis kullanımı için tasarlanmıştır. Cihazı farklı bir amaç için kullanmak, cihaza zarar verecektir.
 - Cihazı kullanmadan önce, şebeke voltajınız ile cihazın voltajının uyumlu olduğundan emin olunuz.
 - Bu kullanma kılavuzunu ilerideki kullanımlar için saklayınız.
 - Paketin içinden çıkan, poşet ve karton gibi maddeleri çocuklardan uzak tutunuz. Aksi takdirde çocuklar bu maddeleri yutmak suretiyle kendilerine zarar verebilirler!
 - İlk kullanımdan önce cihazı hasar ve arızalara karşı kontrol ediniz. Cihazda herhangi bir arıza ya da hasar var ise, cihazı kullanmayınız ve Fakir Yetkili Servisi'ne başvurunuz.
 - Cihazı açık alanda kullanmayınız.
 - Cihaz ile yanıcı sıvıları, yanan maddeleri (sigara, kül vb.) süpürmeyiniz.
 - Cihaz ile sıvı ve akıcı maddeleri kesinlikle vakumlamayınız, kısa devre tehlikesi vardır.
 - Süpürgeyi hiçbir zaman doğrudan insanlara ve hayvanlara tutmayınız.
 - Cam kırıkları, tırnak vb. gibi sert ve kesici maddeler filtrelelere zarar verebilir.
 - Cihazı sadece kendi aksesuarları ile kullanınız.
 - Cihazı hava çıkış kanalı ya da çekiş kısmı kapalı ya da tıkalıyken kesinlikle kullanmayınız.
 - Cihazı duvara ya da mobilyanıza sert bir şekilde vurmuyunuz.
 - Cihaz kapalı durumdayken fişini prizde bırakmayınız.
 - Fakir cihazları bilinen teknik kurallara ve güncel cihaz güvenlik yasalarına uygundur.

- Elektrikli Ev Aletleri Dış Tic A.Ş, dizayn ve donanım değişikliği hakkına sahiptir.
- Hasar gören cihazlar çalıştırılmamalıdır. Herhangi bir hasar durumunda derhal Fakir Yetkili Servisi'ne başvurunuz.
- Cihaz ancak tip etiketinde belirtilen gerilim şebekeye uygunsa çalıştırılmalıdır.
- Prizler 16A'lık ev sigortalarıyla garantiye alınmalıdır.
- Cihaz farklı bir amaç için ya da hatalı bir şekilde kullanılırsa veya bakımı ya da tamir işlemleri yetkili olmayan kişiler tarafından yapılırsa çıkabilecek istenmeyen sonuçlardan Elektrikli Ev Aletleri Dış Tic A.Ş. sorumlu değildir.
- Cihazı filtreleri takılı değilken kesinlikle çalıştırmayınız.
- Cihazı kesinlikle susuz çalıştırmayınız.
- Aksesuar parçaları takılırken, cihaz temizlenirken, tamir veya bakım çalışmalarından önce fişi prizden çekiniz.
- Ambalaj malzemeleri oyuncak değildir ve boğulmaya yol açabilir.
- Cihazın tamiri ancak yetkili Fakir servislerince yapılmalıdır(yetkili servis listesine bakınız). Hatalı tamir işlemleri kullanıcı için tehlike oluşturabilir.
- Bağlantı kablosunu asla keskin kenarlara sürtmeyiniz veya bağlamayınız, elektrik süpürgesini kullanırken kablonun üzerinden geçmemeye özen gösteriniz.
- Hasar görmüş uzatma kablolarını kullanmayınız.
- Ağızlar ve boru uçlarını asla göz ve kulaklara yaklaştırmayınız.
- Alet sadece kuru temizlik için kullanılabilir. Islak halıları vakumlamadan önce, halının kurummasını bekleyiniz.
- Cihazı sıcak veya yanan maddeleri, patlayıcı sıvıları ve gazları vakumlamada kullanmayınız.
- Cihazı kullanmadan önce herhangi bir tıkanıklığa karşı, boru, hortum ve aparatlarını kontrol ediniz.

BU KULLANMA KILAVUZUNU İLERİDEKİ
KULLANIMLAR İÇİN SAKLAYINIZ.

Kutuyu Açma ve İlk Kullanım

İlk kullanımdan önce cihazı ve aksesuarları kutusundan çıkarınız hasar ve arızalara karşı kontrol ediniz. Cihazda herhangi bir arıza ya da hasar var ise, cihazı kullanmayınız ve Fakir Yetkili Servisi'ne başvurunuz.

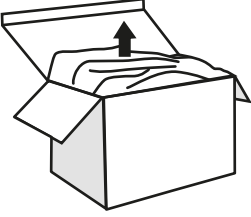**UYARI!**

Kesinlikle hatalı bir aleti kullanmayınız.

**NOT!**

Kutu ve paketlenme elemanlarını ileride taşıma ihtimaline karşı saklayınız.

Kutu İçindekiler:

Pedallı yer aparatı	1
Teleskobik boru	1
Tutma saplı vakum hortumu	1
Turbo yer Aparatı.....	1
Kenar Köşe Aparatı	1
Hassas mobilya Aparatı.....	1
HEPA Filtre (Filtre bölmesi içinde).....	1
Kullanım klavuzu	1
Servis Listesi	1

Teknik Bilgiler

Ürün: Su Filtreli Kuru Vakum Süpürgesi
 Model: Elephant
 Voltaj: 230 V - 50/60 Hz
 Güç: 2200 W max.
 Kullanım ömrü: 10 yıl


Ürün Tanıtımı

- 1- Taşıma sapı
- 2- Kablo sarma düğmesi
- 3- Açma/kapama düğmesi
- 4- Üst kapak
- 5- Şeffaf su tankı
- 6- Su tankı tutma sapı
- 7- Filtre sistemi
- 8- Hortum giriş ağız
- 9- Hortum
- 10- Teleskopik boru
- 11- Zemine göre ayarlanabilen yer aparatı
- 12- Kenar köşe aparatı
- 13- Hassas koltuk & döşeme aparatı
- 14- Turbo Fırça
- 15- HEPA Filtre
- 16- Nem Koruma sünger ve çerçevesi



Kullanım öncesi hazırlık

- Cihazın su tankına 800 cc (0,8 lt) su koyunuz. Su seviyesi kesinlikle tank üzerindeki "Maksimum Su Seviyesi" işaretini geçmemelidir.
- Su tankını gövdeye oturtuktan sonra üst kapağını kapatınız. Kapağın tam olarak oturduğundan emin olunuz.
- Hortumu ana gövdedeki vakum giriş ağzına sıkıca oturtunuz. Teleskopik boruyu hortum tutma sapına taktıktan sonra yer aparatını da borunun diğer ucuna takınız. Süpürgeze kullanıma hazırdır.
- Kullanmak istediğiniz diğer aparatları da teleskopik borunun ucuna takarak kullanabilirsiniz.

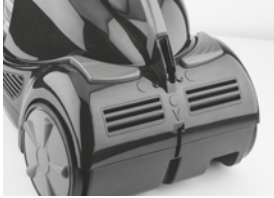Cihazı Kullanım

- Cihazın fişli kablosunu şebekeye (prize) takınız.
- Cihazın üst gövdesinde bulunan Açma / Kapama düğmesine basınız.
- Kullanım esnasında tank içinde bulunan su çok kirliyse, suyu "Cihazın Bakım ve Temizleme Talimatları" bölümünde belirtildiği gibi değiştiriniz.

**DİKKAT!**

1. Süpürgeze ıslak/kuru değil, su filtreli süpürge olduğu için su veya herhangi bir sıvıyı emmek için kullanmayınız.
2. Süpürgeze su koymadan **KESİNLİKLE** çalıştırmayınız.
3. Bu ürün toz veya sınırlı miktardaki akışkanı emecek şekilde kullanılır. Eğer su çok kirliyse su tankını talimatlara uygun şekilde boşaltıp temizleyerek tekrar su doldurunuz. Eğer tanka emilen su izin verilen miktarı geçerse şamandıra otomatik olarak kapanacaktır ve emiş kesilecektir. Temizliğe tekrar başlamak için süpürgeze kapatıp su seviyesini düşürünüz, 15 sn. bekleyin ve sonra tekrar çalıştırınız.


Cihaz Bakım ve Temizlik

Tank içinde bulunan kirli suyu boşaltmak için öncelikle cihazı Açma / Kapama düğmesine basarak kapatınız ve fişli kabloyu prizden çekiniz.


- Su tankı kapağını çıkartarak kenara koyunuz.
- Su tankını tutma sapından tutarak çıkartınız.
- Tankın içinde bulunan kirli suyu boşaltın.
- Kullanım sonrası kirli suyu boşaltmanızı ve cihazını etkileyebilecek her türlü kirlenmeyi önlemeyi öneriyoruz.
- Kirli suyu boşaltıp tankı yıkadıktan sonra temiz bir bez ile kurulamanızı öneriyoruz.
- Cihazı muhafaza ederken içinde su bırakmamanızı önemle öneriyoruz.

**Filtre Sisteminin Temizlenmesi:**

- Filtre sistemindeki L boruyu sıkıca çekerek çıkartınız ve sünger filtreyi yerinden çıkartınız. Parçaları suda temizledikten sonra doğal ortamda kurumasını sağlayınız. Kurduğuna emin olduktan sonra filtre kapağına uygun şekilde monte ediniz.
- Filtre sistemi motoru korumaktadır. Cihazınızı her kullanımdan sonra filtre sistemini de temizleyiniz ve bir sonraki kullanım için kurumasını sağlayınız.

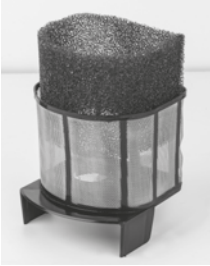
**Nem Koruma Süngerinin Temizlenmesi:**

- Nem koruma süngerini de çıkartıp yıkayabilirsiniz, kuruduktan sonra yerine yerleştiriniz.

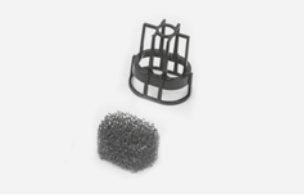

**HEPA Filtre'nin Deęiřtirilmesi:**

Cihazınızın altında bulunan HEPA Filtre kapaęını iki yanındaki kilit mandallarına bastırarak açınız. İerisindeki eski HEPA filtreyi çıkartıp aynı řekilde yenisini yerleřtiriniz. Kapaęı kapatıp mandalların iki yana oturup kilitlendięinden emin olunuz.

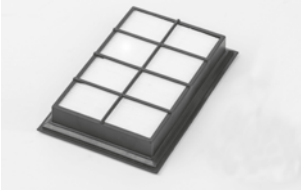**UYARI!**

- Kullanım esnasında cihaz devrilirse, cihazı hemen kapatıp kablosunu prizden çekin. Tank içinde bulunan suyu boşaltın ve “Cihaz Bakım ve Temizlik” talimatları doğrultusunda hareket edin. Sonraki kullanım öncesi her parçanın ve tüm filtrelerin kuru olduęundan emin olunuz.
- H.E.P.A. filtreyi altı ayda bir deęiřtirmenizi öneriyoruz.

**DİKKAT!**

- Filtreleri **KESİNLİKLE** amařır makinesinde yıkamayınız. Kurutmak için sa kurutma makinesi ve amařır makinesinin kurutma bölümünü kullanmayınız.
- Filtreleri tamamen kuruduktan sonra yerlerine yerleřtiriniz. Filtreleri yerine yerleřtirmeden **ASLA** cihazınızı kullanmayınız.

Geri Dönüşüm

Cihazın kullanım ömrünün bitmesi halinde, elektrik kablosunu keserek kullanılamayacak hale getiriniz.



Elektriksel atıklar, normal çöplerle birlikte atılmamalıdır. Ülkenizde mevcut bulunan yasalara göre, bu tür cihazlar için özel olarak belirlenmiş çöp kutularına cihazı bırakınız.



Cihazın paketleme elemanları geri dönüşüme uygun maddelerden üretilmiştir. Bunları geri dönüşüm çöp kutularına atınız.

Cihaz 2002/96/EC sayılı WEEE yönetmeliğine uygundur.

Sevk

Cihazın, orijinal ambalajında veya zarar görmesini önlemek için, iyi ve yumuşak pakette taşınması gerekmektedir. Orijinal ambalajı saklanmalıdır.

Ürünümüz Fakir Elektrikli Ev Aletleri Dış Ticaret A.Ş adına
Atmaca Elektronik San ve Tic AŞ Namık Kemal Mah,
177sok no:2 Esenyurt /İstanbul/ Turkey
Tel : + 90 212 412 12 12 tarafından üretilmiştir.

General	14
Information about the operating instructions	14
Liability	14
Safety is important	14
Notices in the operating instructions	14
Safety	15
CE Declaration of Conformity	15
Usage Area	15
Unauthorized Use	15
Important Safeguards	16
Unpacking and first use	18
Assembling	19
Product Description	19
Technical Specifications	19
Usage	20
Preparation for Use	20
Operating the appliance	20
Blower Function	20
After Use	21
Maintenance and Cleaning the Appliance	21
Waste Disposal	23
Dispatch	23

Thank you for purchasing Fakir Elephant Water Filtered Dry Vacuum Cleaner which has been designed and manufactured to give you many years of trouble-free service.

Information about the operating instructions

These operating instructions are intended to enable the safe and proper handling and operation of the appliance. Read these operating instructions carefully before using the appliance for the first time.

Keep the operating instructions in a safe place. Include these operating instructions when passing the appliance on to another user.

Liability

Fakir Elektrikli Ev Aletleri Dış Tic. A.Ş. will accept no liability for damages resulting from failure to comply with the operating instructions and cannot assume any liability in case the appliance is used for other purposes than its intended use or handled, repaired or serviced improperly.

Safety is important

For yours and others safety please read the instructions before using the appliance. Please keep this instruction in a safe place for the further use. If you pass the appliance on, pass on the instructions too. Remove all packaging, but keep it until you are satisfied that the appliance is working.

Notices in the operating instructions



WARNING!

Indicates notices which, if ignored, can result in risk of injury or death.



ATTENTION!

Indicates notices of risks that can result in damage to the appliance.



NOTICE!

Emphasizes tips and other useful information in the operating instructions.

CE Declaration of Conformity

This appliance fulfills the requirements of the Appliance and Product Safety Law (GPSG) and the EU Directives, 2004/108/EC "Electromagnetic Compatibility" and 2006/95/EC "Low-Voltage Directive". The appliance bears the CE mark on the rating plate.

Usage Area

This product designed for just household use. It is not suitable for Business and industry type. Otherwise it will be accepted as "out of warranty conditions" by our Authorized Services.

Unauthorized Use

The examples of unauthorized use listed here can result in malfunctions, damage to the appliance or personal injury: This appliance is not designed to be used by persons (including children) with limited physical, sensory or mental capacities or by persons lacking in experience and/or knowledge, unless they are supervised by someone who is responsible for their safety or have received instructions on how to use the appliance.

Important Safeguards

When using an electric appliance, basic precautions should always be followed, including the following:


To reduce the risk of fire, electric shock, or injury:

- The device is only authorized for private, domestic use only. Using it for any other purposes will harm the device.
- Before using the device, check that your local mains voltage coincides with the voltage of the mains adapter.
- This appliance is not designed to be used by persons (including children) with limited physical, sensory or mental capacities or by persons lacking in experience and/or knowledge, unless they are supervised by someone who is responsible for their safety or have received instructions on how to use the appliance.
- Electric appliances are not toys for children! Therefore, use and store the appliance away from the reach of children. Children do not recognize the danger involved with handling an electric appliance. Do not let the power cord dangle from the appliance.
Keep packaging films away from children-danger of suffocation!
- Check the device and connections regularly for visible damage. The device must not be used if the housing is damaged or other damage is present. In case of a damage please contact with Authorized Fakir Service.
- Do not use the unit outside.
- Do not use the device to pick up inflammable fluids (e.g. Fuel or solvent) or burning objects (e.g. ash cigarettes).
- Do not point the vacuum cleaner at persons or animals when in operation.
- Only use the device with the accessories supplied.
- Please keep these instructions in a safe place for future references.
- Clean any dust on the power plug regularly.
- When servicing the unit, never put fingers or other objects into any rotating unit, the device would accidentally be turned on.
- Do not operate the product covering the suction or exhaust ports.
- Do not strike the suction head hard against the wall or furniture.
- Disconnect the power plug from the power outlet when not in use.

- Fakir appliances comply with recognized technological standards and the current safety regulations for electrical appliances.
- The appliance bears the CE mark on the rating plate.
- Fakir reserves the right to modify designs and specifications without notice.
- Appliance only to be connected to voltage indicated on the rating label.
- Please connect the vacuum cleaner to 230V mains supply, equipped with fuse 16A.
- Fakir will not accept any liability for damage or injury if the appliance is used other than for its intended purpose or is improperly operated or inexpertly repaired and maintained.
- Before use, check to ensure that all the filters are correctly installed. The appliance must not be used without filters.
- Do not use the appliance without water.
- Use only genuine Fakir filters and accessories.
- The appropriate filters (paper filter or micro power filter, micro main filter, motor protection filter or activated carbon filter or high efficiency submicron particulate airfilter or micro vario combination filter and micro exhaust filter) must be installed at all times to ensure the efficient operation of the appliance.
- When connecting accessories, cleaning, repairing or servicing the unit, unplug the unit.
- Do not let children use electrical appliances unsupervised.
- Repairs should be carried out by an authorized Fakir service center (see enclosed list of addresses). Incorrect repairs may the user to electrical danger.
- Do not pull out the plug from power supply socket by pulling on the connecting lead.
- Do not pull the connecting lead over sharp edges or allow it to become jammed.
- Do not use damaged extension leads.
- If required, the connecting lead has to be replaced together with the cable rewind by an authorized Fakir After-Sales-Service only.
- Before any maintenance operation or replacing a filter, and after use, switch off the appliance and pull out the mains plug.

Unpacking and first use

Unpack the device and check the content of the packaging for completeness. Should you note any damage incurred during transit, please contact your dealer immediately.

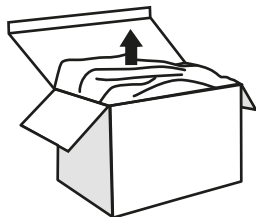

WARNING!

Never use a defective appliance.



NOTICE!

Keep the packaging for storage and future transports (e.g. for moves, service).

Scope of Delivery:


- Floor Brush1
- Telescopic tube1
- Hose with handle1
- Turbo Brush.....1
- Crevice Nozzle1
- Upholstery Nozzle1
- HEPA Filter1
- User Manual1
- Service list1

Technical Specifications

Type of appliance : Water Filtered Dry Vacuum Cleaner
 Model: Elephant
 Voltage :230V 50/60Hz
 Output : max. 2200 W
 Usage time : 10 years

Product Description

- 1-Handle
- 2-Cord Rewinding Button
- 3-On-Off Button
- 4-Top lid
- 5- Transparent water tank
- 6- Water tank handle
- 7-Filter System
- 8-Hose connection to device
- 9-Hose
- 10-telescopic tube
- 11- Floor Brush
- 12- Crevice Nozzle
- 13- Upholstery Nozzle
- 14- Turbo Brush
- 15- HEPA Filter
- 16- Humid protection sponge and frame

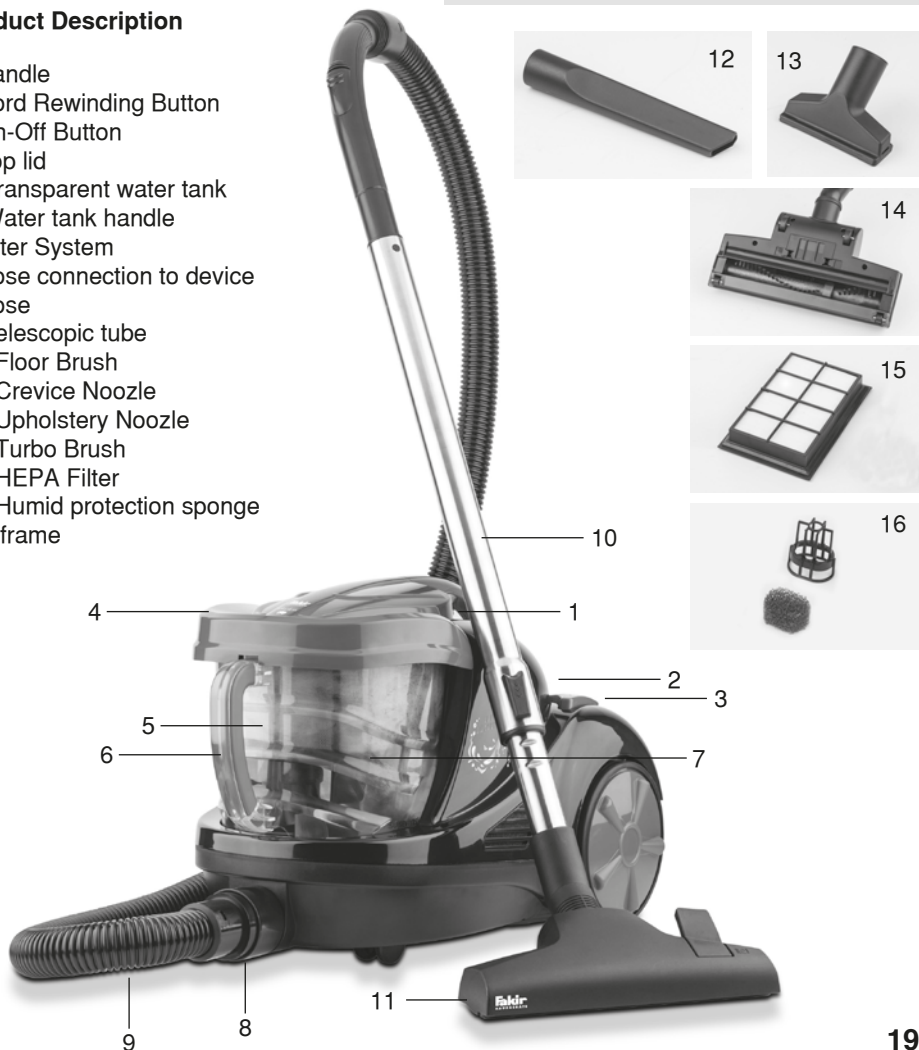

Preparation for Use



- Fill 800 cc (0,8 lt) liters of water into the container. The water level should not exceed the "MAX" level indicated on the container.
- Place the water container onto main body. Close the lid properly.
- Connect the hose to the inlet socket located on the body. Attached the extension tube to the hose handle. Attached the floor brush to other side of the extension tube. your device is ready to be used.
- You can attach the other accessories to telescopic tube.

Operating the appliance



- After checking if the voltage meets the rated voltage, plug in the appliance.
- Press on/off switch located on the top of the appliance.
- If the water becomes very dirty during cleaning, replace it as described in the "Maintenance and Cleaning the Appliance" section.



CAUTION!

1. Your device is NOT wet/dry vacuum cleaner but water filtered only. You do not vacuum any kind of liquid.
2. You never use the vacuum cleaner without water in container.
3. This device is only dust and dirt sucking. if the water is dirty pls follow the maintenance and cleaning instructions. If the water level higher than max. sign, water gauge automaticly will be closed and vacuum will be stopped. To start for cleaning, reduce the water on the tank and wait for 15sec before turning it on again.

Maintenance and Cleaning the Appliance



- To empty the water inside the container, switch off the appliance by pushing on the On/Off switch and disconnect the power supply cable from the mains.
- Open the container lid and take the container out. Pour out the water and wash the container properly.
- It is strongly recommended to dump the water inside the container and to wash out any dirt that might be remaining inside the container after each use.
- It is recommended to wipe inside the container with a dry cloth after washed.
- You may wash the SPONGE filter under the water.
- It is recommended that the vacuum cleaner is stored without water inside the container. It is best to fill the filtration water right before the use.



Cleaning the filter system:

Pull out the L hose and take out the sponge filter. After washing all parts let them dry on the room temperature. after they completely dry replace them.



Filter system protect the motor. Pls clean the filter system after every use and let them dry completely each time.



Cleaning the humid protection sponge:

You can wash the humid protection sponge and replace it.

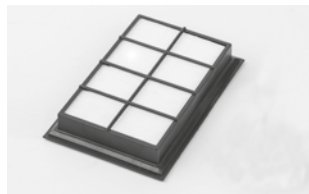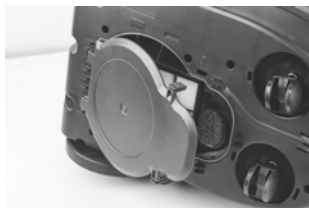

**Changing HEPA Filter:**

Under the device there is a HEPA lid with clips two sides. Push the clips from two sides and open the Lid. Take out the HEPA. Replace with the new one and close the Lid properly.

**WARNING!**

- If the vacuum cleaner overturns accidentally during operation, switch the unit off and unplug immediately. Dump the water inside the container and follow the cleaning procedure described in “Maintenance and Cleaning the Appliance” section, above. Make sure that all the parts have been dried before using the appliance again.

**ATTENTION!**

You NEVER wash the filters in washing mashine. You do not use any kind of dryer to dry it.
You DO NOT use your device unless all the filters on.

Waste disposal

If the service life of the device has ended, in particular if functional disturbances occur, make the worn-out device unusable by cutting through the power cable.

Dispose of the device according to the environmental regulations applicable in your country. Electrical waste must not be disposed of together with household waste. Bring the worn-out device to a collection center. The packaging of the device consists of recycling-capable materials. Place these, sorted out according to material, in the collectors provided, so that recycling can be carried out on them.

For advice on recycling, refer to your local authority or your dealer. Dispose of used dust bag and filters in domestic waste.

This appliance fulfills the requirements of the 2002/96/EG WEEE regulations.

Dispatch

Carry the appliance in the original package or a similar, well-padded package to prevent damage to the appliance.

This product is produced on behalf of Fakir Elektrikli Ev Aletleri Dış Ticaret A.Ş. by Atmaca Elektronik San ve Tic AŞ Namık Kemal Mah, 177sok no:2 Esenyurt /Istanbul/ Turkey Tel : + 90 212 412 12 12



İmalatçı / İthalatçı Firma:

Fakir Elektrikli Ev Aletleri Dış. Tic. A.Ş.

Meşrutiyet Cad. No:43 Tepebaşı-İstanbul TÜRKİYE

Tel:(212) 249 70 69 (pbx) Fax:(212) 251 51 42