

**Fakir**  
HAUSGERÄTE

# HEROIC

## Torbasız Kuru Elektrik Süpürgesi

**TR** Kullanma kılavuzu  
Torbasız Kuru Elektrik Süpürgesi

**GB** Instructions manuel  
Bagless Dry Vacuum cleaner





Genel	4
Kullanma talimatları hakkında bilgi	4
Sorumluluk	4
Kullanma talimatları hakkında uyarılar	4
Güvenlik	5
CE Uygunluk deklarasyonu	5
Kullanım alanı	5
Yetkisiz kullanım	5
Güvenlik Önemlidir	6
Güvenlik Uyarıları	6
Arıza ve Hasar Durumunda	7
Genel Bakış	9
Teknik bilgiler	9
Cihaz açıklamaları	9
Kutuyu Açma	10
Filtre Sistemi	11
Cihazın Birleştirilmesi	12
Aparatlar	13
Elektrikli Süpürge Kullanımı	14
Filtre Değişim Göstergesi	14
Kullanım Sonrası	15
Saklamak	15
Bakım	16
Toz haznesinin boşaltılması	16
Filtrenin ve HEPA'nın temizlenmesi ve değiştirilmesi	16
Sünger filtrenin temizlenmesi ve değiştirilmesi	16
Temizlik	17
Cihazın geri dönüşüm noktalarına bırakılması	18
Sorun Muhtemel Neden Çözüm Hata	19
Sevk	19

**Tercihinizi FAKİR Heoric elektrikli süpürge den yana kullandığınız için teşekkür ederiz. Ürünümüz size uzun süre sorunsuz hizmet vermek için tasarlanıp üretilmiştir.**

### **Kullanma talimatları hakkında bilgi**

Bu kullanma talimatları cihazın düzgün ve güvenli bir şekilde kullanılabilmesi için düzenlenmiştir.

Kendi güvenliğiniz ve diğerlerinin güvenliği için ürünü çalıştırmadan önce kullanma kılavuzunu okuyunuz.

Bu kılavuzu ilerideki kullanımlar için güvenli bir yerde saklayınız.

### **Sorumluluk**

Bu kullanım kılavuzundaki talimatlara uygun olmayacak şekilde kullanım sonucunda ortaya çıkabilecek bir hasar oluşması durumunda Fakir, sorumluluk kabul etmez.

Cihazın, kendi alanı dışında bir yerde kullanılması, Fakir yetkili servislerinden başka bir yerde tamir ettirilmesi durumunda Fakir, sorumluluk kabul etmez.

### **Kullanma talimatları hakkında uyarılar**



#### **UYARI!**

Bu işaret yaralanma ya da ölümle sonuçlanabilecek tehlikeleri belirtir.



#### **DİKKAT!**

Bu işaret ürününüzün zarar görmesi ya da bozulmasına yol açabilecek tehlikeleri belirtir.



#### **NOT!**

Kullanım kılavuzunda önemli ve faydalı bilgileri belirtir.

**CE Uygunluk deklarasyonu**

Bu cihaz Avrupa Birliđinin 2004/108/EC Elektromanyetik Uyumluluk ve 2006/95/EC Gerilim Direktiferi'nin talimatlarına tamamen uygundur. Bu ürün cihaz tip etiketinde CE işareti sahitir.

**Kullanım alanı**

Bu cihaz, sadece hafif ev ve ofis kullanımı için tasarlanmıřtır.

Cihazı farklı bir amaç için kullanmak, cihaza zarar verecektir.

Cihaz, sert zeminlerin, halıların, döşenmiş mobilyaların, ya-takların, mobilyaların, kalorifer peteklerinin ve perdelerin temizliğinde kullanılır.

Cihazın kusursuz çalışması için tüm filtrelerinin takılmış ol-ması gerekir.

Cihazı sadece Fakir'in orijinal aksesuarları ile kullanınız.

Cihaz bunların dışındaki amaçlar için kesinlikle kullanılmamalıdır.

**Yetkisiz kullanım**

Ařađıda belirtilen yetkisiz kullanım durumlarında, cihaz zarar görebilir ya da yaralanmaya yol açabilir;

- Bu cihaz akli dengesi yerinde olmayan kişilerin ya da bu tip cihazları kullanmak için yeterli bilgisi olmayan kişilerin kullanması için uygun değildir. Bu tip kişilerin cihazı kullanmasına kesinlikle izin vermeyiniz.
- Cihaz bir oyuncak değildir. Bundan dolayı çocukların bu cihazı kullanmalarına izin vermeyiniz ve cihazı çocukların yanında kullanırken daha dikkatli olunuz.
- Paketin içinden çıkan poşet gibi maddeleri çocuklardan uzak tutunuz. Bođulma tehlikesi mevcuttur!

**Güvenlik Önemlidir****UYARI!**

Vakumlamadan dolayı yaralanma tehlikesi:

- Ağızlar ve boru uçları asla göz, kulak, parmaklar, saçlar ve vücudun diğer parçalarına yaklaştırılmamalıdır.
- Ağızlar ve boru uçları asla göz ve kulaklara yaklaştırılmamalıdır.
- Süpürgeyi hiçbir zaman doğrudan insanlara ve hayvanlara tutmayınız. Üretici, cihazın yanlış kullanılmasında dolayı ortaya çıkabilecek herhangi bir durumdan sorumlu tutulamaz.

**Güvenlik Uyarıları****YARALANMA TEHLİKESİ**

- Turbo fırça ya da elektrikli turbo fırça çalışırken, kesinlikle elinizi yaklaştırmayınız. Aksi halde yaralanabilirsiniz.
- Toner, kartuş gibi zararlı maddeleri kesinlikle vakumlamayınız.

**YANGIN VE PATLAMA TEHLİKESİ**

- Sıcak veya yanan maddeler, patlayıcı sıvılar ve gazlar kesinlikle vakumlanmamalıdır.
- Sıcak küller, yanan sigara izmaritleri ya da kibritler kesinlikle vakumlanmamalıdır.
- Cihazı kesinlikle patlayıcı ya da parlayıcı maddelerin yakınında kullanmayınız.

**DİKKAT!**

- Kısa devre riski, Su ya da diğer sıvıları kesinlikle vakumlamayınız.
- Filtrelerin zarar görmesine yol açmamak için, cam parçacıkları benzeri sert ve sivri cisimleri kesinlikle vakumlamayınız.
- Cihazın yağmur, toz ve kirden etkilenmemesi için, kesinlikle açık alanda kullanmayınız.
- Cihazın aşırı ısınmadan zarar görmemesi için kesinlikle hava çıkış kanalı ve emiş kısımlarının üzerini örtmeyiniz.

**Elektrik Akımı****DİKKAT!**

- Cihazı kullanmadan önce, şebeke voltajınız ile cihazın voltajının uyumlu olduğundan emin olunuz.
- Prizler 16A'lık ev sigortalarıyla garantiye alınmalıdır.
- Sadece cihaza uygun uzatma kablosu kullanınız.

**Elektrik Çarpma Riski****UYARI!**

- Cihaza kesinlikle ıslak ellerle dokunmayınız.
- Her zaman cihazın fişinden çekerek prizden çıkartınız, kesinlikle elektrik kablosundan çekmeyiniz.
- Bağlantı kablosunu asla keskin kenarlara sürtmeyiniz veya bağlamayınız, sıcaklık veren kısımlara değmemesine özen gösteriniz.
- İlk kullanımdan önce cihazı hasar ve arızalara karşı kontrol ediniz. Cihazda herhangi bir arıza ya da hasar var ise, cihazı kullanmayınız ve Fakir Yetkili Servisi'ne başvurunuz.
- Cihazın elektrik kablosu hasar görmüşse kesinlikle cihazı çalıştırmayınız ve Fakir Yetkili Servisi'ne başvurunuz.
- Hasar görmüş uzatma kablolarını kullanmayınız.

**Tehlike anında**

**Herhangi bir tehlike anında, cihazın fişini hemen prizden çekiniz.**

**Arıza veya hasar durumunda****UYARI!**

Cihazın elektrik kablosu hasar görmüşse kesinlikle cihazı çalıştırmayınız, böyle bir durumda elektrik çarpması riski vardır.

Müşteri Hizmetlerini aramadan önce, kendiniz sorunu/hatayı gidermeyi araştırın. Bunun için "SORUN GİDERME" bölümüne bir göz atın.

Eğer sorunu/hatayı giderelemiyorsanız, lütfen Müşteri Hizmetlerini arayın;

Aramada önce lütfen Ürün kodunu (Artikel-Nr.) ve Modelini hazır tutun. Bu bilgileri ürününüzdeki TİP ETİKETİNDE bulabilirsiniz.

## Güvenlik Uyarıları

**UYARI!**

Cihazın tamiri ancak yetkili Fakir servislerince yapılmalıdır (yetkili servis listesine bakınız). Yanlış tamir işlemleri kullanıcı için tehlike oluşturabilir.





## Teknik bilgiler

Voltaaj	: 230 V~ 240V
Frekans	: 50 Hz 50 Hz 50 Hz
Güç Nominal / max	: 1800- 2000 W
Ses düzeyi max	: < 83 dB
Düşük hava basıncı max	: 25 kPa
Ağırlık	: 6,5 kg 6,5 kg 6,5 kg
Kullanım Ömrü	: 10 Yıl

## Cihaz açıklamaları

- A- Hortum tutma sapı
- B- Teleskopik uzatma borusu
- C- Kablo sarıcı pedalı
- D- Halı ve sert zeminlerde kullanılmak üzere ayarlanabilen pedallı yer aparatı
- E- AÇMA/ KAPATMA Pedalı
- F- Vakum Güç kontrolü

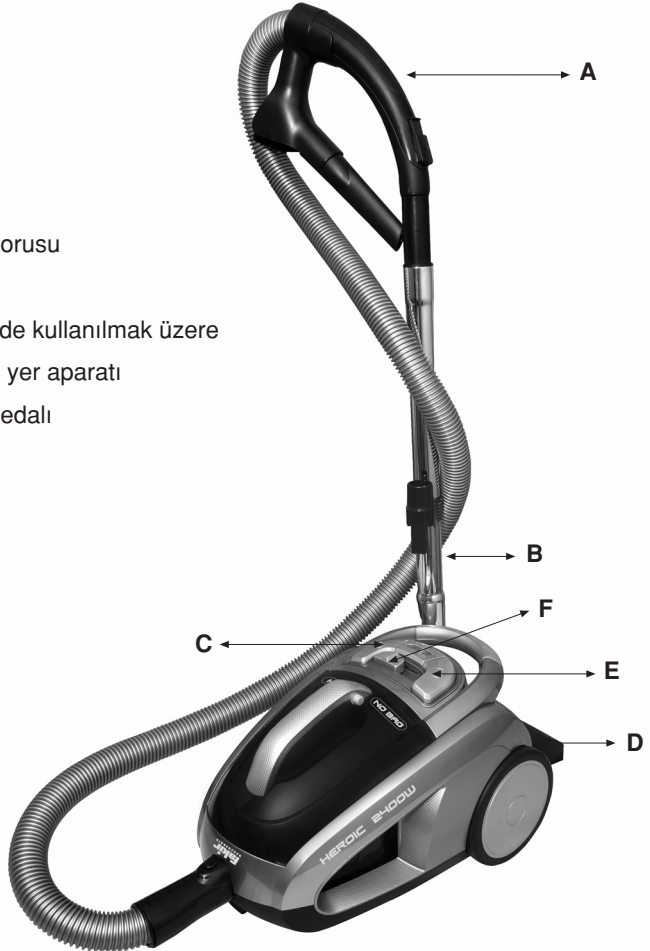

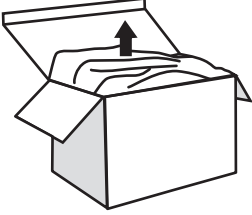**Kutuyu Açma**

İlk kullanımdan önce cihazı ve aksesuarları kutusundan çıkarınız hasar ve arızalara karşı kontrol ediniz. Cihazda herhangi bir arıza ya da hasar var ise, cihazı kullanmayınız ve Fakir Yetkili Servisi'ne başvurunuz.

**UYARI!**

Kesinlikle hatalı bir aleti kullanmayınız.

**NOT!**

Kutu ve paketlenme elemanlarını ileride taşıma ihtimaline karşı saklayınız.

**Kutu içindekiler**

Pedallı yer aparatı.....	1
Tutma saplı vakum hortumu .....	1
Teleskopik vakum borusu .....	1
Döşeme fırçası .....	1
Kenar köşe aparatı .....	1
Hassas Koltuk temizleme aparatı .....	1
HEPA-filtre (filtre bölmesi içinde) .....	1
Kullanma kılavuzu .....	1

**Filtre Sistemi**

Fakir-Heroic filtre sistemi ile toz filtreleme kalitesini kendi gereksinimlerinize adapte edebilirsiniz. Bu mükemmel filtre sistemi özellikle alerjisi olan kişiler için oldukça efektiftir. Bu sistem havada bulunabilecek 0,1 µm boyutundaki polen, mite ve çok ince tozları hapseder ve neredeyse yok eder. Filtre o kadar etkilidir ki, çıkış kanalından çıkan havadaki toz miktarı, odanızda bulunan havadaki toz miktarından daha azdır.

En küçük toz parçacıkları HEPA\* filtre içine hapsolür.

**\* HEPA = HIGHEFFICIENCY PARTICULATE AIR FILTER**

## Birleştirme

**UYARI!**

Cihazınızı birleştirmeye başlamadan önce herhangi bir yaralanmaya sebep olmamak için, fişinin prize takılı olmadığından emin olunuz.

- Vakum hortumunu vakum soketinin içine kilitlemeye kadar itiniz . Hortumu sökmek için vakum hortumunun yanında bulunan düğmelerine basınız .

**NOT!**




Hortumu sökmek için hortum başındaki iki düğmeye basınız. .

- Vakum hortumunun tutma sapını teleskopik borunun içine doğru yavaşça itiniz.
- Teleskopik boruyu yer aparatının içine doğru yavaşça itiniz.

**Teleskopik borunun uzunluğunun ayarlanması**

- Elinizle teleskopik boru'nun üst kısmını tutunuz, ayar düğmesini baş parmağınızla aşağıya doğru itiniz.
- Elinizle teleskopik boru'nun alt kısmını tutunuz ardından teleskopik borunun orta kısmını istediğiniz uzunluğa gelene kadar çekiniz.
- Süpürge artık kullanıma hazır.

## Aksesuar Kullanımı

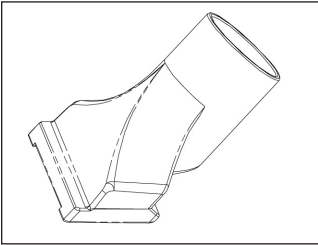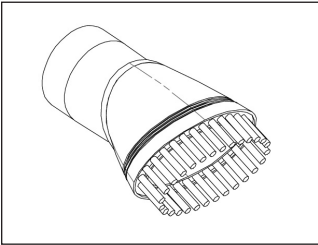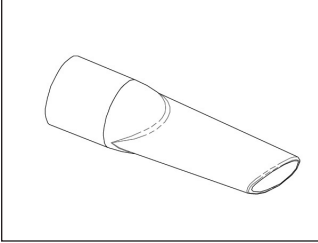**UYARI!**

Fırçaları değiştirmeden önce mutlaka cihazı kapatınız. Kenar köşe aparatı ve döşeme fırçası tutma sapına takılı bulunur.

- Kullanmak istediğiniz aparatı, vakum hortumu tutma sapına ya da teleskopik boruya yavaşça yerleştiriniz.

**Kenar köşe aparatı**

Döşemelerinin derin yerlerinin, köşelerin, çıkıntılıların ve süpürgeliklerin temizliğinde kullanılır.

**Mobilya Fırçası**

Kumaşların, perdelerin temizliğinde kullanılır. Tekstil kumaşa özel temizlik sağlar.

**Hassas Koltuk ve Döşeme Aparatı**

Hassas Döşemelik kumaşların, perdelerin temizliğinde kullanılır. Tekstil kumaşa özel temizlik sağlar.

**NOT!**

Emiş gücünü düşük ya da orta hıza ayarlayınız.

**NOT!**

Emiş gücünü orta ya da yüksek hıza ayarlayınız.

**Aparat kullanım tablosu**

Aparat	sert zemin veya halı	minder araları	perde	merdiven	duvar	mobilya
Yer aparatı	✓			✓		
Döşeme Fırça			✓	✓	✓	✓
Kenar-koşe aparatı		✓		✓	✓	

**Süpürme**

Cihazınızı çalıştırmadan önce, tüm filtrelerinin düzgünce takılı olduğundan emin olunuz. Özellikle alerjik kişilerin sağlığı için, tüm filtrelerin eksiksiz ve düzgün bir biçimde takılı olması önemlidir.

**UYARI!**

Her kullanımdan önce, cihazınızı ve kablosunu herhangi bir hasara karşı kontrol ediniz.

- İsteddiğiniz fırçayı takınız.
- Kabloyu dilediğiniz uzunluğa kadar çekiniz ve prize takınız.
- Açıp Kapatma "ON/OFF" düğmesine basarak süpürgeyi çalıştırın.
- İsteddiğiniz vakum gücünü ayarlayınız.

Vakum kontrolü aynı zamanda, tutma sapı üzerindeki vakum kontrol düğmesi aracılığıyla da ayarlanabilir.

Bu kontrolü sadece kısa zamanlı olarak vakum gücünü azaltmak istediğiniz zamanlarda kullanınız. Normal vakum gücü için, bu kontrolü kapalı tutunuz.

Cihazınız üzerindeki bulunan Vakum kontrolünü vakum gücünü azaltmak için kullanabilirsiniz. Bu şekilde enerjiden de tasarruf edebilirsiniz.

**Filtre Değişim Göstergesi**

Toz torbasının dolması, filtrelerin tıkanması ya da vakumun bir şekilde yapılamaması durumlarında bu göstergenin ışığı yanacaktır . Doğru teşhis için, Vakum Kontrolü en son ayara getirilip pedallı yer aparatı kaldırılmalıdır.

Bu durumda, toz haznesini boşaltın ve filtreleri değiştirin ya da vakum gücünü tıkayan etkeni giderin.

**UYARI!**

Süpürme işleminizi bitirmenizin hemen ardından aşağıdaki işlemleri uygulayınız. Cihazınızı asla ortada bırakmayınız.

- Kontrol panelindeki On/Off tuşunu kullanarak cihazınızı kapatınız.
- Ardından cihazın fişini prizden çekiniz.
- Kontrol panelindeki kablo sarıcı tuşa bastığınızda, kablo otomatik olarak sarılacaktır. Kablo tümüyle sarılana kadar, fişini elinizle tutunuz.
- Cihazı bu şekilde taşıyabilmek için, yer aparatını süpürge-nizin alt kısmında bulunan park pozisyonu aparatına yerleş-tiriniz.
- Ardından süpürge-nizi çocukların ulaşamayacağı bir yere kaldırınız.

**DİKKAT!**





Süpürge-nizi kesinlikle, ısı yayan, radyatör, soba gibi cihazların yakınında, direkt güneş ışığı alan yerlerde bırakmayınız.

**NOT!**

Sadece Fakir tarafından sağlanan orijinal filtreleri kullanınız. Ancak böylelikle mükemmel filtrelemeyi sağlayabilirsiniz.

**Saklamak**

## Bakım

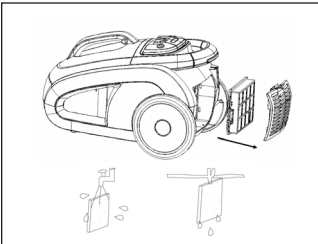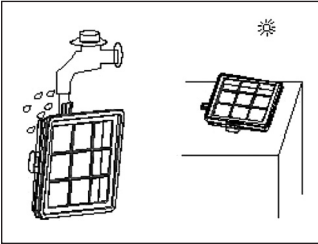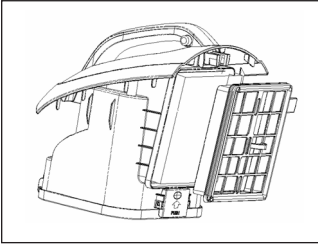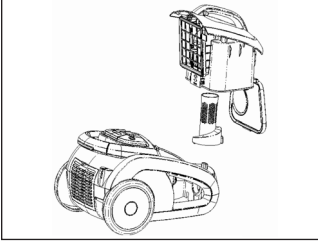**1. Toz haznesinin boşaltılması**

Elektrikli süpürgeyi her zaman, toz haznesi takılıyken çalıştırınız.

Elektrik süpürge maxımımda çalışırken ve yer fırçası havadayken filtre göstergesi kırmızıya dönerse toz haznesi hemen boşaltılmalıdır.

1. Esnek hortumu çıkardıktan sonra, sapın iki yanındaki kilitleme düğmesine basınız
2. Toz haznesini yukarı çekerek çıkartınız.
3. Haznenin alt tarafındaki kilide basın.
4. Toz haznesini boşaltıp temizleyin.
5. Kapağı kapatıp toz haznesini süpürgein bölmesine aşağıya doğru kilitlene kadar itiniz.

**2. Filtrenin ve HEPA'nın temizlenmesi ve değiştirilmesi**

Filtre yılda en az iki defa veya görünebilir bir yoğunluk oluştuğunda temizlenmelidir.

- HEPA'yı hava girişinin tıkalı olduğunu hissettiğinizde temizleyin.
- HEPA hava girişi ve filtre hava çıkışı içindir
- Elektrik süpürgeyi her zaman filtre ve HEPA ile beraber çalıştırınız.
- Aksi takdirde, motor hasarı ya da düşük emiş gücü ortaya çıkacaktır.
- Elektrikli süpürgein filtresini temizlemeden önce, cihazın fişini prizden çekiniz.
- Filtreyi yıkamak için kesinlikle çamaşır makinesi kullanmayınız.
- Filtreyi kurulamak için saç kurutma makinesi kullanmayınız.

**A- HEPA filtreyi yerinden çıkartınız.**

**B- HEPA filtreyi ılık su içinde durulayınız ve filtre tamamen kuruyana kadar bekleyiniz.**

**C- HEPA Filtreyi yerine geri takınız**

**3. Sünger filtrenin temizliği ve değiştirilmesi**

1. Sünger filtre kapağını açınız.
2. Sünger filtrenin kapağını açtığınız zaman, filtreyi yerinden çıkarmak için iki parmağınızı birden kullanınız, daha sonra süngeri yukarıya doğru çekiniz.
3. Filtreyi ılık su içinde durulayınız ve filtre tamamen kuruyana kadar bekleyiniz. VEYA filtreyi dışarı çıkartınız ve temiz bir filtre ile değiştiriniz.
4. Sünger filtre kapağını kapatınız.



**DİKKAT!**

HEPA filtre her 12-18 ayda bir deęiřtirilmelidir.

**UYARI!**

Süpürgeyi temizlemeden ya da bakım yapmadan önce mutlaka kapatınız ve fiřini prizden çekiniz.

**DİKKAT!**

Kesinlikle alkol ve solvent bazlı temizleyiciler kullanmayınız. Aksi takdirde cihazınıza zarar verebilirsiniz. Cihazınızı yumuřak ve hafif bir nemli bezle temizleyiniz. Aynı řekilde gerektięinde toz torbası haznesini de temizleyebilirsiniz. Hortum, fırça vb. aksesuarlar belirli aralıklarda tıkanıklıęa karřı kontrol edilip temizlenmelidir.

## TR CİHAZIN GERİ DÖNÜŞÜM NOKTALARINA BIRAKILMASI



Cihazın kullanım ömrünün bitmesi halinde, elektrik kablosunu keserek kullanılamayacak hale getiriniz.

Ülkenizde mevcut bulunan yasalara göre, bu tür cihazlar için özel olarak belirlenmiş çöp kutularına cihazı bırakınız.

Elektriksel atıklar, normal çöplerle birlikte atılmamalıdır.

Cihazı elektriksel atıklar için belirlenmiş çöp kutularına atınız.

Cihazın paketlenme elemanları geri dönüşüme uygun maddelerden üretilmiştir. Bunları geri dönüşüm çöp kutularına atınız. Kullanılmış toz torbası ve filtreleri genel çöp kutularına atabilirsiniz.

**Sorun Muhtemel  
Neden Çözüm**

Cihazınız herhangi bir arızaya karşı kalite kontrolden geçirilmiştir.

Ancak yine de, herhangi bir nedenden dolayı çalışmaz ise, Fakir Yetkili Servisi'ne başvurmadan önce aşağıdaki tabloda yer alan çözüm yollarını deneyiniz.

Hata	Muhtemel Sebebi	Çözüm
Cihaz Çalışmıyor	Fiş prize takılı değil Cihaz açık değil Prizden elektrik gelmiyor Elektrik kablosu zarar görmüş	Fişi prize takınız Cihaz açınız Farklı bir priz deneyiniz Cihazı tamire götürünüz
Cihaz vakumlamıyor	Toz torbası / Filtreler dolu ya da tıkalı Hortum boru yada aparatlar tıkalı Seçilen fırça yüzeye uygun değildir Filtre kirlenmiştir	Toz torbası / Filtreleri Değiştiriniz  Tıkalı kısmı temizleyiniz Fırçayı yüzeye uygun olan ile değiştiriniz İlgili filtreyi değiştiriniz
Cihaz normalden yüksek sesle çalışıyor	Vakum kısımlarına parçalar sıkışmış	Sıkışan parçaları çıkarınız

**Sevk**

Cihazın, orijinal ambalajında veya zarar görmesini önlemek için, iyi ve yumuşakpakette taşınması gerekmektedir.



General	
Information about the operating instructions	22
Liability	22
Notices in the operating instructions	22
Safety	23
CE Declaration of Conformity	23
Intended use	23
Unauthorized use	23
Safety is important	24
In case of danger	24
In case of defects	24
Overview	27
Device description	27
Unpacking	28
The filter system	29
Assembly	30
Assembling	31
Operation	32
Vacuum cleaning	32
Filter change indicator	32
After vacuum cleaning	33
Storage	33
Maintenance:	34
Spilling rubbish from the dust compartment subassembly	34
Cleaning and changing filter or HEPA	34
Changing the sponge filter	34
Cleaning	35
Waste disposal	36
If at once you don't succeed ...	37
Fault	37
Dispatch	37

**Thank you for purchasing a floor vacuum cleaner of the Fakir HEROIC. It was developed and manufactured to work reliably for many years.**

### **Information about the operating instructions**

These operating instructions are intended to enable the safe and proper handling and operation of the appliance.

Read these operating instructions carefully before using the appliance for the first time.

Keep the operating instructions in a safe place. Include these operating instructions when passing the appliance on to another user.

### **Liability**

We will accept no liability for damages resulting from failure to comply with the operating instructions.

We cannot assume any liability in case the appliance is used for other purposes than its intended use or handled, repaired or serviced improperly.

### **Notices in the operating instructions**



#### **WARNING!**

Indicates notices which, if ignored, can result in risk of injury or death.



#### **ATTENTION!**

Indicates notices of risks that can result in damage to the appliance.



#### **NOTICE!**

Emphasizes tips and other useful information in the operating instructions.

**CE Declaration of Conformity**

This appliance fulfills the requirements of the Appliance and Product Safety Law (GPSG) and the EU Directives. The appliance bears the CE mark on the rating plate.

**Intended use**

The appliance may only be used in private homes and auxiliary rooms to vacuum clean dry dust material.

Using the device for a different purpose causes damage to the device.

It may be used only for cleaning hard floors and textile floor coverings, carpets, upholstered furniture, mattresses, furniture, heating radiators and curtains.

Check if all filters have been inserted properly before using the appliance. The appliance must not be used without filters.

Use only original Fakir filters and accessories.

Any other use is considered unauthorized and is prohibited.

**Unauthorized use**

The examples of unauthorized use listed here can result in malfunctions, damage to the appliance or personal injury:

- This appliance is not designed to be used by persons (including children) with limited physical, sensory or mental capacities or by persons lacking in experience and/or knowledge, unless they are supervised by someone who is responsible for their safety or have received instructions on how to use the appliance. Children should be supervised to ensure that they do not play with the appliance.
- Children should be supervised to ensure that they do not play with the appliance. Electric appliances are not toys for children! Therefore, use and store the appliance away from the reach of children. Children do not recognize the danger involved with handling an electric appliance. Do not let the power cord dangle from the appliance..
- Keep packaging films away from children - danger of suffocation!

## Safety is Important



### WARNING!

Danger of injury from vacuuming:

- Never vacuum articles of clothing, hair, eyes, fingers or other parts of the body.
- Nozzles and tube ends must never be brought close to the eyes or ears.
- Never use the appliance to vacuum human beings or animals. The manufacturer is not responsible for any damages caused by unauthorized use or improper operation.

## Imported Safeguards

### HEALTH HAZARD

- Danger of injury! Never reach into the rotating brush roller when working with the turbo / electrical suction brush.
- Never vacuum hazardous materials, such as toner used in laser printers or copiers.

### DANGER OF FIRE AND EXPLOSION!

- Never vacuum hot ashes or burning objects, such as cigarettes or matches.
- Never use the appliance in the vicinity of explosive or flammable materials.
- Never vacuum any solvents, explosive gases or liquids.



### ATTENTION!

- Risk of short circuits! Never vacuum water and other liquids, such as damp carpet cleaning solutions..
- Destruction of filters! Never vacuum sharp or pointed objects, such as glass splinters, nails, etc. Materials that harden when dry, such as plaster or cement, can also destroy the filter.
- Damage to appliance from rain and dirt!: Never use or store the appliance outdoors.
- Danger from overheating! Always keep the openings in the appliance free.



**Electric current****ATTENTION!**

- Incorrect voltage can destroy the appliance. Operate the appliance only if the voltage specified on the rating plate corresponds to the voltage in your household.
- The socket must be protected with a 16 A automatic circuit breaker.
- Use only extension cords designed for the power input of the appliance.

**Danger of electric shock****WARNING!**

- Never touch the plug with wet hands.
- When unplugging the appliance, always pull directly on the plug and never on the power cord.
- Do not kink, pinch or run over the power cord and do not expose it to heat sources.
- If the power cord of this appliance is damaged, it must be replaced by the manufacturer or the manufacturer's customer service department or a person with similar qualifications to prevent any hazards.
- Do not put the appliance in operation if you detect any visible damage on the housing, if the power cord is defective or if you suspect a defect (e.g. after a fall).
- Do not use any damaged extension cords.

**In case of danger**

**In case of danger or accident, unplug the appliance immediately.**

**Safety In case of defects****WARNING!**

Never operate a defective appliance or an appliance with a defective power cord. There is a danger of electric shock.

Before contacting our service department, check to see if you can eliminate the problem yourself. Refer to the chapter "If at once you don't succeed".

If you were not able to eliminate the problem yourself, please contact our customer service.

Before calling, have the article no. and appliance/model name at hand. This information can be found on the rating plate of the appliance.


**Imported Safeguards****WARNING!**

Repairs and maintenance may be performed only by trained technicians (e.g. Fakir customer service). Only original Fakir replacement parts may be used. Improperly repaired or serviced appliances may pose a danger to the user.


Technical data	
Mains voltage	: 230 V~ 240 V
Nominal frequency	: 50 Hz 50 Hz 50 Hz
PowerIEC / max.	: 1800W- 2000W
Acoustic pressure level max.	: < 83 dB
Low air pressure max.	: 25 kPa
Weight approx.	: 6,5kg 6,5kg 6,5kg
Usege life	: 10 years

### Device description

- A- Handle with suction controller
- B- Telescopic suction tube
- C- Foot button cable rewind
- D- Floor suction nozzle, adjustable for hard floors and textile-covered floors
- E- Foot button ON-OFF
- F- Suction power control

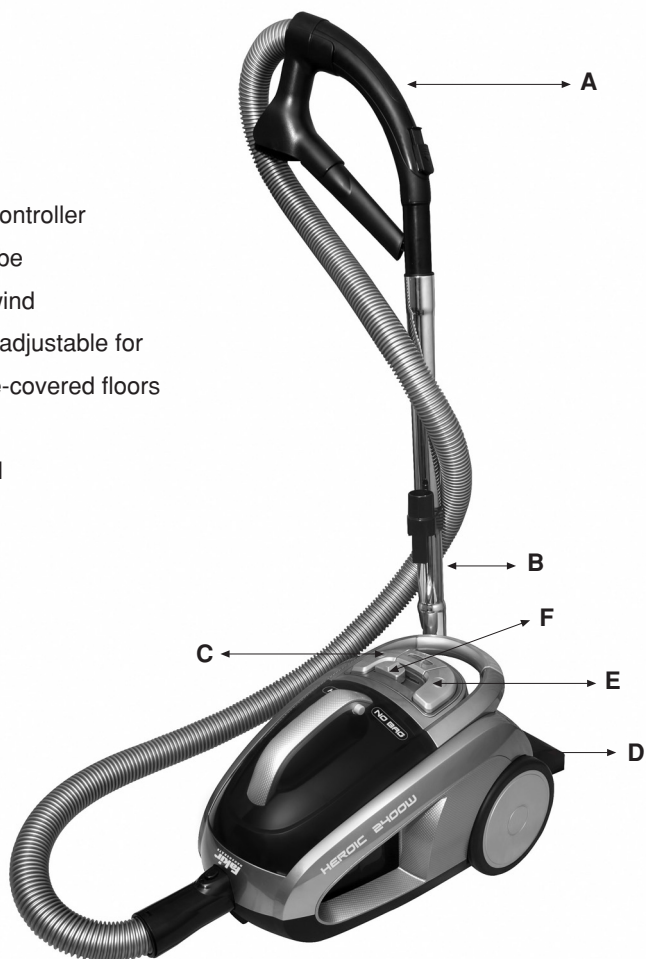

Unpacking

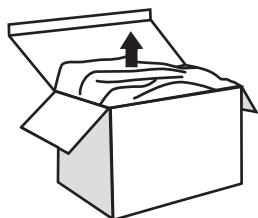

Unpack the device and check the content of the packaging for completeness (see scope of supply). Should you note any damage incurred during transit, please contact your dealer immediately.



WARNING!

Never use a defective appliance.



NOTICE!

Keep the packaging for storage and future transports (e.g. for moves, service).

Scope of delivery

Floor suction nozzle, adjustable .....	1
Suction hose with handle .....	1
Telescopic suction tube .....	1
Upholstery nozzle (in accessories compartment) .....	1
Crevice nozzle (in the accessories compartment) .....	1
Sofa nozzle .....	1
HEPA-Filter (in filter enclosure) .....	1
Operating manual .....	1

### Filter System

The Fakir Heroic Filter-System allows you to adjust the quality of the dust filtration to meet your needs. The vacuum cleaner will only display its filter properties that are so important to allergy sufferers when all the filters are used. Almost all pollen, mites and fine dust from a size of 0.1  $\mu$ m will be filtered out. The filtering process is so good that the waste air coming from the appliance has a lower dust value than that of the ambient air.

HEPA\* filter almost completely filters out the finest particles (particulate) from a size of 0,1  $\mu$ m.

**\* HEPA= HIGH EFFICIENCY PARTICULATE AIR FILTER**

## Assembly

**WARNING!**

Please ensure that the mains plug is disconnected before assembling the parts otherwise the appliance might start up unintentionally and cause injury.

- Insert the end of the suction hose into the suction pipe  
You will hear the two locking parts on the left and right click into place.

**NOTICE!**




To release the suction hose, squeeze both locking parts.

- Insert the handle of the suction hose and twist slightly to make sure it sits tightly in the telescopic suction tube.
- Insert the telescopic suction tube and twist slightly to ensure it sits tightly in the floor suction nozzle.

**Setting the length of the suction tube**

- Use your thumb to press the slide element in the direction of the arrow.
- Hold the lower part of the pipe in your other hand. Now pull or push the suction tube to the required length.
- The vacuum cleaner is now ready for use.

## Utilization

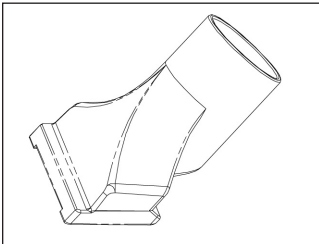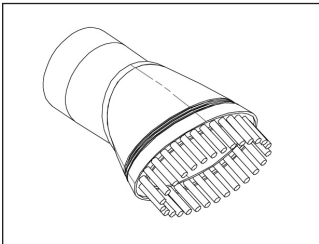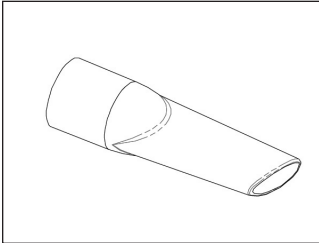

### WARNING!

Switch off the device before changing the nozzles.

Crevice nozzle, furniture brush and upholstery nozzle are stored on the suction hose handle.

- Insert the corresponding nozzle securely with a slight turn onto the handle of the suction hose, or onto the telescopic suction tube.

### Crevice nozzle

The crevice nozzle allows dirt from deep cracks in upholstered furniture, corners, skirting boards etc. to be suctioned off.

### Upholstery nozzle

The upholstery nozzle can be used to vacuum clean curtains, upholstered furniture etc. It has a thread pick-up to collect fluff and threads from textiles.

### Sofa nozzle

The sofa nozzle can be used to vacuum clean curtains, upholstered furniture etc. It has a thread pick-up to collect fluff and threads from textiles.



### NOTICE!

Set suction capacity low to medium.



### NOTICE!

Set suction capacity medium to high.

## Attachment use chart

Attachment	Floor/Carpet	Between Cushions	Drapes	Stairs	Walls	Furniture
Floor Brush	✓			✓		
Combination Brush			✓	✓	✓	✓
Crevice Tool	✓	✓		✓	✓	

## Vacuum cleaning

Before use, ensure that all filters and the right dust bag have been inserted and that these are not damaged. The optimum filtering level, which is so important for allergy sufferers, is only reached when intact filters are used that are inserted correctly.



### WARNING!

Check the appliance and the power cable before use. Faulty appliances may cause injury and should not be used.

- Attach the required nozzle.
- Pull out the power supply cable by means of the plug until the required length is reached and insert the plug into a mains socket.
- Press the foot button "On/Off" to switch on the vacuum cleaner.
- Set the required suction level.

You can also regulate the suction level by means of the suction control on the handle of the suction hose. Use this control (slide valve) to reduce the suction level for brief periods of time. During normal vacuum cleaning, this slide valve should remain closed.

Use the section level control for permanent reduction of the suction level to save energy.

## Filter change indicator

When the dust bag or filters are full or if the accessories are blocked (hose, pipe, nozzle), the filter change indicator will shine. To ensure correct analysis, the maximum suction level needs to be set and the floor nozzle lifted from the floor.

In this case, change the dust container or blocked filter or remedy the blockage.



**WARNING!**

Follow the steps below as soon as you stop vacuum cleaning. Never leave the appliance unattended.

- Press the foot button "On/Off" to switch off the vacuum cleaner.
- Remove the plug from the mains socket.
- Press the foot button "cable rewind" to reel in the cable. Gently guide the cable with your hand until the cable has been completely wound in and the plug rests snugly against the opening.

**Storage**

- Insert the park holder of the floor nozzle into the nozzle holder on the underneath of the appliance.
- Store the vacuum cleaner in a place that is out of the reach of children.





**CAUTION!**

Never place the appliance next to heat sources and avoid direct sunlight, as the heat may damage the vacuum cleaner.

**NOTICE!**

Only use original Fakir filters.  
This is the only way to ensure that the excellent filter properties of the vacuum cleaner are utilised.

## Maintenance

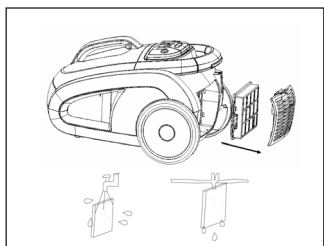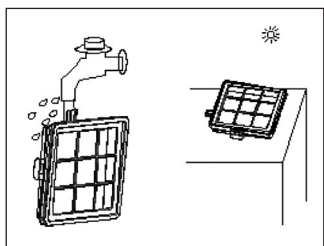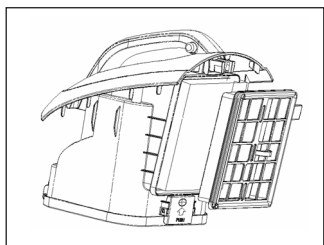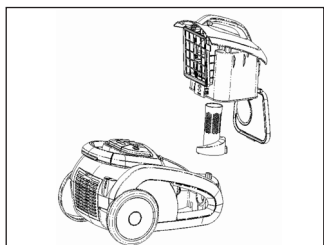

### 1. Spilling rubbish from the dust compartment subassembly

Always operate the cleaner with the dust compartment subassembly whole installed.

The dust container must be emptied if the window of the filter indicator turns fully red when the cleaner is operating at maximum power and the nozzle is raised from the floor.

1. After removing the flexible tube, handhold handle and press the locking buttons in two sides.
2. Take out the dustcup.
3. Press the lock of dustcup's lower cover.
4. Carry away the dust-glass cap and Spill rubbish
5. Replace the dust compartment subassembly until it is locked.

### 2. Cleaning and changing filter or HEPA

Filter for air-inlet should be cleaned at least twice a year or when it becomes visible solid.

Clean HEPA for air-let when you find it is filled in.

HEPA for air-inlet and filter for air-outlet are changed.

Always operate the cleaner with filters and HEPA installed.

Otherwise, reduced suction or motor damage may be result.

Disconnect from electrical outlet, before cleaning filter.

Do not use a washing machine to rinse filter.

Do not use hair drier to dry it.

#### A-Take out HEPA assembly.

**B-Rinse bracket and HEPA in lukewarm water and dry Filter and HEPA completely. (HEPA is rinsed by brush.)**

**C-Replace the HEPA filter .**

### 3. Changing the sponge filter

1. Open the cover for sponge filter.
2. When open the cover for filter, use your two fingers pulling ouch for filter, and then pulling sponge up.
3. Rinse sponge in lukewarm water and dry sponge completely. OR Take the sponge out and change a clean one.
4. Close the cover for sponge filler.

**NOTICE!**

Change the HEPA filter every 12 - 18 months.

**WARNING!**

Switch off the vacuum cleaner and disconnect the plug from the mains socket before cleaning the appliance. This ensures that the appliance is not switched on unintentionally.

**CAUTION!**

Do not use cleaning detergents, abrasive agents or alcohol as these will damage the casing. Only dry-wipe the appliance or clean with a damp cloth. You can also clean the filter chamber with a damp cloth if necessary. Suction accessories such as the hose, pipes or nozzles should be regularly checked for blockages, cleaned and washed and dried.

**Waste disposal**

If the service life of the device has ended, in particular if functional disturbances occur, make the worn-out device unusable by cutting through the power cable.

Dispose of the device according to the environmental regulations applicable in your country.

Electrical waste must not be disposed of together with household waste. Bring the worn-out device to a collection center.

The packaging of the device consists of recycling-capable materials. Place these, sorted out according to material, in the collectors provided, so that recycling can be carried out on them.

For advice on recycling, refer to your local authority or your dealer

Dispose of used dust bag and filters in domestic waste.

**If at once you don't succeed**

Dear customer,  
 Our products are subject to strict quality control.  
 If this device should not function trouble-free in spite of that,  
 we regret this very much.  
 Before you contact our Fakir Customer Service, check  
 whether you can correct the fault yourself.

Malfunction	Possible cause	Solution
Appliance does not work	Plug is not plugged in or the appliance is not switched on. Socket does not carry any current. Power cable is damaged.	Plug in the plug or switch the appliance on Test the cylinder vacuum cleaner at another socket which you are sure carries current Have the cable replaced by authorized Fakir services
Appliance does not suck up any dirt	Dust container is full or blocked. Selected brush/nozzle are incorrect for the type of flooring. Filter is dirty. Nozzle, telescopic tube or suction hose are blocked.	Empty/clean dust container. Adjust your brush/nozzle selection to the type of flooring. Clean the corresponding filter. Remove the blockage. If necessary, use along wooden rod for this (e.g.a broom handle)
Appliance is making unusually loud noises while running	Sucked-in particles are blocking the air-way.	Remove the particles. If necessary, use a long wooden rod for this (e. g. a broom handle).

**Dispatch**

Carry the appliance in the original package or a similar, well-padded package to prevent damage to the appliance.







İmalatçı / İthalatçı Firma: Fakir Elektrikli Ev Aletleri Dış Tic. A.Ş.  
Meşrutiyet Cad. No:43 Tepebaşı-Istanbul TÜRKİYE  
Tel:(212) 249 70 69 (pbx) Fax:(212) 251 51 42