

RUNNER

TR **Kullanım Kılavuzu**
Cyclonic Dik Elektrikli Süpürge

GB **Instructions Manuel**
Cyclonic Stick Vacuum Cleaner



Genel	1
Kullanma talimatları hakkında bilgi	1
Sorumluluk	1
Kullanma talimatları hakkında uyarılar	1
Güvenlik	2
CE Uygunluk deklarasyonu	2
Kullanım alanı	2
Yetkisiz kullanım	2
Güvenlik Önemlidir	3
Güvenlik Uyarıları	3
Arıza ve Hasar Durumunda	4
Genel Bakı	6
Teknik bilgiler	6
Cihaz açıklamaları	6
Kutuyu Açma	7
Cihazın Birleştirilmesi	8
Kullanım	9
Kullanım öncesi	9
Kullanım sonrası	9
Saklamak	10
Bakım	10
Toz haznesinin boşaltılması	10
Temizlik	11
Cihazın geri dönüşüm noktalarına bırakılması	12
Sorun Giderme	12
Sorun Muhtemel Neden Çözüm	12
Hata	12
Sevk	12

Tercihinizi FAKİR RUNNER dik elektrikli süpürge den yana kullandığınız için teşekkür ederiz. Ürünümüz size uzun süre sorunsuz hizmet vermek için tasarlanıp üretilmiştir.

Kullanma talimatları hakkında bilgi

Bu kullanma talimatları cihazın düzgün ve güvenli bir şekilde kullanılabilmesi için düzenlenmiştir. Kendi güvenliğiniz ve diğerlerinin güvenliği için ürünü çalıştırmadan önce kullanma kılavuzunu okuyunuz. Bu kılavuzu ilerideki kullanımlar için güvenli bir yerde saklayınız.

Sorumluluk

Bu kullanım kılavuzundaki talimatlara uygun olmayacak şekilde kullanım sonucunda ortaya çıkabilecek bir hasar oluşması durumunda Fakir Elektrikli Ev Aletleri Dış Tic A.Ş. sorumluluk kabul etmez. Cihazın, kendi alanı dışında bir yerde kullanılması, Fakir yetkili servislerinden başka bir yerde tamir ettirilmesi durumunda Fakir Elektrikli Ev Aletleri Dış Tic A.Ş. sorumluluk kabul etmez.

Kullanma talimatları hakkında uyarılar



UYARI!

Bu işaret yaralanma ya da ölümlerle sonuçlanabilecek tehlikeleri belirtir.



DİKKAT!

Bu işaret ürününüzün zarar görmesi ya da bozulmasına yol açabilecek tehlikeleri belirtir.



NOT!

Kullanım kılavuzunda önemli ve faydalı bilgileri belirtir.

CE Uygunluk deklarasyonu

Bu cihaz Avrupa Birliđinin 2004/108/EC Elektromanyetik Uyumluluk ve 2006/95/EC Gerilim Direktifleri'nin talimatlarına tamamen uygundur. Bu ürün cihaz tip etiketinde CE işaretine sahiptir.

Kullanım alanı

Bu cihaz, sadece hafif ev kullanımı için tasarlanmıştır. Cihazı farklı bir amaç için kullanmak, cihaza zarar verecektir. Cihaz, sert zeminlerin, halıların, döşenmiş mobilyaların, temizliğinde kullanılır. Cihazın kusursuz çalışması için filtrelerinin takılmış olması gerekir. Cihazı sadece Fakir'in orijinal aksesuarları ile kullanınız. Cihaz bunların dışındaki amaçlar için kesinlikle kullanılmamalıdır.

Yetkisiz kullanım

Aşağıda belirtilen yetkisiz kullanım durumlarında, cihaz zarar görebilir ya da yaralanmaya yol açabilir;

- Bu cihaz akli dengesi yerinde olmayan kişilerin ya da bu tip cihazları kullanmak için yeterli bilgisi olmayan kişilerin kullanması için uygun değildir. Bu tip kişilerin cihazı kullanmasına kesinlikle izin vermeyiniz.
- Cihaz bir oyuncak değildir. Bundan dolayı çocukların bu cihazı kullanmalarına izin vermeyiniz ve cihazı çocukların yanında kullanırken daha dikkatli olunuz.
- Paketin içinden çıkan, poşet ve karton gibi maddeleri çocuklardan uzak tutunuz. Aksi takdirde çocuklar bu maddeleri yutmak suretiyle kendilerine zarar verebilirler, özellikle ambalaj poşetleri ile oynamaları boğulma riski oluşturabilir.

Güvenlik Önemlidir**UYARI!**

Vakumlamadan dolayı yaralanma tehlikesi:

- Ağızlar ve boru uçları asla göz, kulak, parmaklar, saçlar ve vücudun diğer parçalarına yaklaştırılmamalıdır.
- Süpürgeyi hiçbir zaman doğrudan insanlara ve hayvanlara tutmayınız. Üretici, cihazın yanlış kullanılmasından dolayı ortaya çıkabilecek herhangi bir durumdan sorumlu tutulamaz.

Güvenlik Uyarıları**YANGIN VE PATLAMA TEHLİKESİ**

- Sıcak veya yanan maddeler, patlayıcı sıvılar ve gazlar kesinlikle vakumlanmamalıdır.
- Sıcak küller, yanan sigara izmaritleri ya da kibritler kesinlikle vakumlanmamalıdır.
- Cihazı kesinlikle patlayıcı ya da parlayıcı maddelerin yakınında kullanmayınız.

**DİKKAT!**

- Kısa devre riski, Su ya da diğer sıvıları kesinlikle vakumlamayınız.
- Filtrenin zarar görmesine yol açmamak için, cam parçacıkları benzeri sert ve sivri cisimleri kesinlikle vakumlamayınız.
- Cihazın yağmur, toz ve kirden etkilenmemesi için, kesinlikle açık alanda kullanmayınız.
- Cihazın aşırı ısınmadan zarar görmemesi için kesinlikle hava çıkış kanalı ve emiş kısımlarının üzerini örtmeyiniz.

Elektrik Akımı**DİKKAT!**

- Cihazı kullanmadan önce, şebeke voltajınız ile cihazın voltajının uyumlu olduğundan emin olunuz.
- Prizler 16A'lık ev sigortalarıyla garantiye alınmalıdır.
- Sadece cihaza uygun uzatma kablosu kullanınız.

Elektrik Çarpma Riski**UYARI!**

- Cihaza kesinlikle ıslak ellerle dokunmayınız.
- Her zaman cihazın fişinden çekerek prizden çıkartınız, kesinlikle elektrik kablosundan çekmeyiniz.
- Bağlantı kablosunu asla keskin kenarlara sürtmeyiniz veya bağlamayınız, sıcaklık veren kısımlara değmemesine özen gösteriniz.
- İlk kullanımdan önce cihazı hasar ve arızalara karşı kontrol ediniz. Cihazda herhangi bir arıza ya da hasar var ise, cihazı kullanmayınız ve Fakir Yetkili Servisi'ne başvurunuz.
- Cihazın elektrik kablosu hasar görmüşse kesinlikle cihazı çalıştırmayınız ve Fakir Yetkili Servisi'ne başvurunuz.
- Hasar görmüş uzatma kablolarını kullanmayınız.

Tehlike anında

Herhangi bir tehlike anında, cihazın fişini hemen prizden çekiniz.

Arıza veya hasar durumunda**UYARI!**

Cihazın elektrik kablosu hasar görmüşse kesinlikle cihazı çalıştırmayınız, böyle bir durumda elektrik çarpması riski vardır.

Müşteri Hizmetlerini aramadan önce, kendiniz sorunu/hatayı gidermeyi araştırın. Bunun için "SORUN GİDERME" bölümünü okumanızı rica ediyoruz. Eğer sorunu/hatayı gideremiyorsanız, lütfen Müşteri Hizmetlerini arayın; Aramada önce lütfen ürün modelini ve seri numarasını hazır tutun. Bu bilgiyi ürününüzdeki TİP ETİKETİNDE bulabilirsiniz.


Güvenlik Uyarıları


**UYARI!**

Cihazın tamiri ancak yetkili Fakir servislerince yapılmalıdır (yetkili servis listesine bakınız). Yanlış tamir işlemleri kullanıcı için tehlike oluşturabilir. Yetkili servis dışında yapılan tamir ve bakımlar sonrasında oluşacak her türlü hasar veya sorundan Fakir Elektrikli Ev Aletleri Dış Tic. A.Ş. sorumlu değildir.

Teknik bilgiler

Voltaaj	: 230 V~ 240V
Frekans	: 50 Hz
Güç	: 1600 W max
HEPA	: 12
Kullanım Ömrü	: 10 Yıl

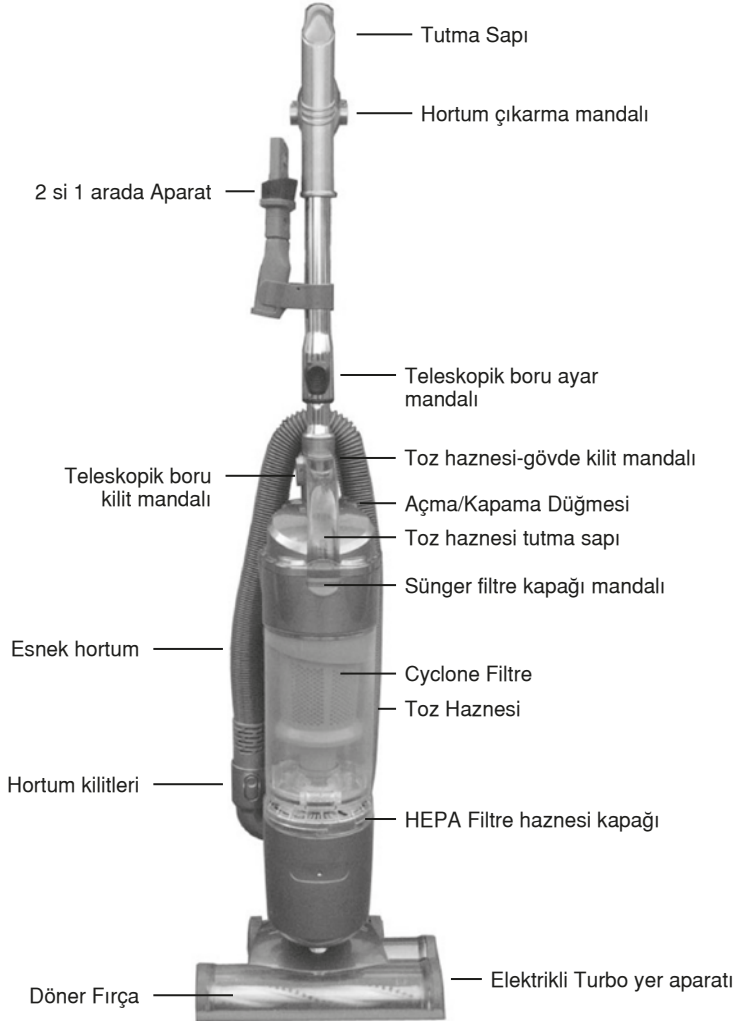

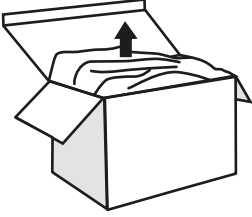Kutuyu Açma

İlk kullanımdan önce cihazı ve aksesuarları kutusundan çıkarınız hasar ve arızalara karşı kontrol ediniz. Cihazda herhangi bir arıza ya da hasar var ise, cihazı kullanmayınız ve Fakir Yetkili Servisi'ne başvurunuz.

**UYARI!**

Kesinlikle hatalı bir aleti kullanmayınız.

**NOT!**

Kutu ve paketlenme elemanlarını ileride taşıma ihtimaline karşı saklayınız.

Kutu içindekiler

Elektrikli süpürge	1
Turbo yer aparatı	1
2si1 arada kenar & köşe, koltuk aparatı	1
Kullanım kılavuzu	1
Servis Listesi	1

**UYARI!**

Cihazınızı birleştirmeye başlamadan önce herhangi bir yaralanmaya sebep olmamak için, fişinin prize takılı olmadığından emin olunuz.

**UYARI!**

Her kullanımdan önce, cihazınızı ve kablosunu herhangi bir hasara karşı kontrol ediniz.

**UYARI!**

Her kullanımdan önce, cihazınızı ve kablosunu herhangi bir hasara karşı kontrol ediniz.

**DİKKAT!**

Süpürgenizi kesinlikle, ısı yayan, radyatör, soba gibi cihazların yakınında, direkt güneş ışığı alan yerlerde bırakmayınız.

**Cihazın birleştirilmesi**

1. Tutma sapını ana gövdedeki sap yuvasına yerleştirip klik sesi duyuncaya kadar iterek mandalın kilitlendiğinden emin olunuz.
2. Turbo yer aparatını ana gövdenin alt tarafındaki yuvasına sıkıca iterek oturtunuz
3. Tutma saplı teleskopik borunun yüksekliği boru üzerindeki mandal çekilerek istenildiği gibi ayarlanabilmektedir.

**Kullanım**

1. Kablo kancalarını çevirerek kabloyu çözünüz. Hiç bir yere takılmadığından emin olarak kablonun fişini prize takınız
2. Ayağınızı turbo yer aparatı üzerine basılı tutarak elektrikli süpürgezin gövdesini, tutma sapını aşağı doğru indirerek geriye doğru yaslayınız.
3. Geniş manevra kabiliyeti sunan turbo yer aparatı mobilyaların çevresini rahatça temizlemenize olanak verir.
4. Elektrikli turbo aparat, cihaz dik duruma getirildiğinde kendiliğinden duracaktır. Böylelikle esnek hortumu kullanırken turbo yer aparatı güvenli -off- konumda olacaktır.
5. İşiniz bittiğinde her zaman kabloyu, kablo sarma kancaları etrafına dolayarak toplayınız.





Esnek Hortumun Kullanımı

1. Esnek hortumun alt ucunu yandaki mandala basarak çıkartınız



2. Esnek hortumu tutma sapının arka kısmındaki yuvaya takınız klik sesi duyulacaktır.



3. Teleskopik boru kilit mandalına basıp, tutma sapından çektiğinizde, ana gövdeden kurtulacaktır.



4. 2si 1 arada kenar köşe ve mobilya fırçasını borunun ucuna takarak, ulaşılması zor yüksek yüzeylere, kenar ve köşelere ulaşabilirsiniz.



UYARI!

Süpürme işleminizi bitirmenizin hemen ardından aşağıdaki işlemleri uygulayınız. Cihazınızı asla ortada bırakmayınız.



Toz Haznesinin Boşaltılması

Toz haznesi temizliğinden önce, cihazın elektrik ile bağlantısının kesildiğinden kesin surette emin olunmalıdır. Gereksiz tıkanmaların önüne geçmek için toz haznesi sık sık boşaltılıp temizlenmelidir.

1. Toz haznesini ana gövdeden ayırmaya yarayan, hazne tutma sapının üst kısmındaki düğmeye baş parmağınızla basarak hazneyi ana gövdeden ayırınız.

2. Hazne tutma sapından sıkıca tutarken, haznenin alt kısmındaki düğmeye basınca toz hazne alt kapağı açılacak ve toz haznesi boşalacaktır.



Filtrelerin Temizlenmesi

1. Sünger filtre her ay yıkanmalı ve her 6 ayda bir değiştirilmelidir.

Toz haznesi tutma sapının üst kısmındaki düğmeye basarak hazneyi ana gövdeden ayırın.

2. Aynı tutma sapının alt kısmındaki klipsi hafifçe kaldırdığınızda hazne kapağı açılacaktır. Görünen sünger filtreyi dış çerçevesi ile birlikte çekip çıkartınız.

3. Kirli yüzey altta kalacak şekilde akan suyun altına tutarak durulayınız. Filtre tamamen kuruduktan sonra yerine yerleştiriniz ve hazne kapağını kapatınız. Filtrenin kurduğundan emin olmadan kullanmayınız.





4. HEPA filtresini temizlemek için, toz haznesini gövdeden ayırınız.

5. Gövdenin üstünde görünen HEPA filtre kapağını (open) ok yönüne çevirerek açınız. HEPA filtresini çerçevesiyle birlikte çıkartınız ve yumuşak bir fırça yardımıyla tozunu silkeleyiniz.




6. Kirli yüzey altta kalacak şekilde akan suyun altına tutarak durulayınız. Filtre tamamen kurduktan sonra yerine yerleştiriniz ve tazne kapağını kapatınız. Filtrenin kurduğundan emin olmadan kullanmayınız.

HEPA filtresini yeniden yerine yerleştirip filtre kapağını (lock) ok yönüne çevirerek kilitleyiniz.



NOT!

Sadece Fakir tarafından sağlanan orijinal filtreleri kullanınız. Ancak böylelikle mükemmel filtrelemeyi sağlayabilirsiniz.

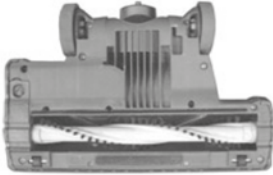

Elektrikli Turbo Yer Aparatı

Yer aparatının turbo fırçasını temizlemek için öncelikle süpürgeyi yere yatırınız yada aparatı, gövde birleşme yerindeki düğmeye basarak gövdeden ayırınız. Döner fırçaya sarılı, saç, halı tüyü vs.. yi makas yada başka sivri bir alet yardımı ile temizleyebilirsiniz.



UYARI!

Süpürgeyi temizlemeden ya da bakım yapmadan önce mutlaka kapatınız ve fişini prizden çekiniz.



DİKKAT!

Kesinlikle alkol ve solvent bazlı temizleyiciler kullanmayınız. Aksi takdirde cihazınıza zarar verebilirsiniz.



Cihazın kullanım ömrünün bitmesi halinde, elektrik kablosunu keserek kullanılamayacak hale getiriniz. Ülkenizde mevcut bulunan yasalara göre, bu tür cihazlar için özel olarak belirlenmiş çöp kutularına cihazı bırakınız. Elektriksel atıklar, normal çöplerle birlikte atılmamalıdır. Cihazı elektriksel atıklar için belirlenmiş çöp kutularına atınız.

Cihazın paketleme elemanları geri dönüşüme uygun maddelerden üretilmiştir. Bunları geri dönüşüm çöp kutularına atınız. Kullanılmış filtreleri genel çöp kutularına atabilirsiniz.

Bu cihaz 2002/96/EG sayılı WEEE yönetmeliğine uygundur.

Sorun Muhtemel Neden Çözüm

Değerli Müşterimiz;
Cihazınız herhangi bir arızaya karşı kalite kontrolden geçirilmiştir.
Ancak yine de, herhangi bir nedenden dolayı çalışmaz ise, Fakir Yetkili Servisi'ne başvurmadan önce aşağıdaki tabloda yer alan çözüm yollarını deneyiniz.

Hata	Muhtemel Sebebi	Çözüm
Cihaz Çalışmıyor	Fiş prize takılı değil Cihaz açık değil Prizden elektrik gelmiyor Elektrik kablosu zarar görmü	Fişi prize takınız Cihaz açınız Farklı bir priz deneyiniz Cihazı tamire götürünüz
Cihaz vakumlamıyor	Filtre dolu ya da tıkalı	Filtreyi Değiştiriniz Tıkalı kısmı temizleyiniz
Cihaz normalden yüksek sesle çalışıyor	Vakum kısımlarına parçalar sıkışmış	Sıkışan parçaları çıkarınız

Eğer sorunu/hatayı gideremiyorsanız, lütfen Müşteri Hizmetlerini arayın:
Aramada önce lütfen Ürün Modelini ve seri numarasını hazır tutun. Bu bilgiyi ürününüzdeki TİP ETİKETİNDE bulabilirsiniz.

Sevk

Cihazın, orijinal ambalajında veya zarar görmesini önlemek için, iyi ve yumuşak pakette taşınması gerekmektedir.

Ürünümüz Fakir Elektrikli Ev Aletleri Dış Ticaret A.Ş adına Kingclean Electric Co.,Ltd No.99 Zhufeng Road, Suzhou Wuzhong District, Jiangsu, China Tel: 0086 512 68258657 tarafından üretilmiştir.

General	
Information about the operating instructions	14
Liability	14
Notices in the operating instructions	14
Safety	15
CE Declaration of Conformity	15
Intended use	15
Unauthorized use	15
Safety is important	16
In case of danger	17
In case of defects	17
Overview	19
Device description	19
Unpacking	20
Assembling	21
Usage	22
Before vacuum cleaning	22
After vacuum cleaning	23
Storage	23
Maintenance	23
Spilling rubbish from the dust compartment	24
Cleaning	25
Waste disposal	25
If at once you don't succeed ...	25
Fault	25
Dispatch	25

Thank you for purchasing FAKİR Runner Stick Vacuum Cleaner. It was developed and manufactured to work reliably for many years.

Information about the operating instructions

These operating instructions are intended to enable the safe and proper handling and operation of the appliance.

Read these operating instructions carefully before using the appliance for the first time.

Keep the operating instructions in a safe place. Include these operating instructions when passing the appliance on to another user.

Liability

Fakir Elektrikli Ev Aletleri Dış. Tic. A.Ş. will accept no liability for damages resulting from failure to comply with the operating instructions.

Fakir Elektrikli Ev Aletleri Dış. Tic. A.Ş. cannot assume any liability in case the appliance is used for other purposes than its intended use or handled, repaired or serviced improperly.

Notices in the operating instructions



WARNING!

Indicates notices which, if ignored, can result in risk of injury or death.



ATTENTION!

Indicates notices of risks that can result in damage to the appliance.



NOTICE!

Emphasizes tips and other useful information in the operating instructions.

CE Declaration of Conformity

This appliance fulfills the requirements of the Appliance and Product Safety Law (GPSG) and the EU Directives 2004/108/EC "Electromagnetic Compatibility" and 2006/95/EC "Low-Voltage Directive."

The appliance bears the CE mark on the rating plate. .

Intended use

The appliance may only be used in private homes and auxiliary rooms to vacuum clean dry dust material.

It may be used only for cleaning hard floors and textile floor coverings, carpets, upholstered furniture, mattresses.

Check if the filter have been inserted properly before using the appliance. The appliance must not be used without filter. Use only original Fakir filters and accessories.

Any other use is considered unauthorized and is prohibited.

Unauthorized use

The examples of unauthorized use listed here can result in malfunctions, damage to the appliance or personal injury:

- This appliance is not designed to be used by persons (including children) with limited physical, sensory or mental capacities or by persons lacking in experience and/or knowledge, unless they are supervised by someone who is responsible for their safety or have received instructions on how to use the appliance.
- Children should be supervised to ensure that they do not play with the appliance. Electric appliances are not toys for children! Therefore, use and store the appliance away from the reach of children. Children do not recognize the danger involved with handling an electric appliance. Do not let the power cord dangle from the appliance..
- Keep packaging films away from children - danger of suffocation!

Safety is Important



WARNING!

Danger of injury from vacuuming:

- Never vacuum articles of clothing, hair, eyes, fingers or other parts of the body.
- Nozzles and tube ends must never be brought close to the eyes or ears.
- Never use the appliance to vacuum human beings or animals. The manufacturer is not responsible for any damages caused by unauthorized use or improper operation.

Important Safeguards

HEALTH HAZARD

- Never vacuum hazardous materials, such as toner used in laser printers or copiers.

DANGER OF FIRE AND EXPLOSION!

- Never vacuum hot ashes or burning objects, such as cigarettes or matches.
- Never use the appliance in the vicinity of explosive or flammable materials.
- Never vacuum any solvents, explosive gases or liquids.



ATTENTION!

- Risk of short circuits! Never vacuum water and other liquids, such as damp carpet cleaning solutions.
- Destruction of filter! Never vacuum sharp or pointed objects, such as glass splinters, nails, etc. Materials that harden when dry, such as plaster or cement, can also destroy the filter.
- Damage to appliance from rain and dirt Never use or store the appliance outdoors.
- Danger from overheating! Always keep the openings in the appliance free.

Electric current**ATTENTION!**

- Incorrect voltage can destroy the appliance. Operate the appliance only if the voltage specified on the rating plate corresponds to the voltage in your household.
- The socket must be protected with a 16 A automatic circuit breaker.
- Use only extension cords designed for the power input of the appliance.

Danger of electric shock**WARNING!**

- Never touch the plug with wet hands.
- When unplugging the appliance, always pull directly on the plug and never on the power cord.
- Do not kink, pinch or run over the power cord and do not expose it to heat sources.
- If the power cord of this appliance is damaged, it must be replaced by the manufacturer or the manufacturer's customer service department or a person with similar qualifications to prevent any hazards.
- Do not put the appliance in operation if you detect any visible damage on the housing, if the power cord is defective or if you suspect a defect (e.g. after a fall).
- Do not use any damaged extension cords.

In case of danger

In case of danger or accident, unplug the appliance immediately.

Safety In case of defects**WARNING!**

Never operate a defective appliance or an appliance with a defective power cord. There is a danger of electric shock.

Before contacting our service department, check to see if you can eliminate the problem yourself. Refer to the chapter "If at once you don't succeed".

If you were not able to eliminate the problem yourself, please contact our customer service.


Before calling, have the style name and serial number on hand. This information can be found on the rating plate of the appliance.

Important Safeguards**WARNING!**


Repairs and maintenance may be performed only by trained technicians (e.g. Fakir customer service). Only original Fakir replacement parts may be used. Improperly repaired or serviced appliances may pose a danger to the user. Fakir Elektrikli Ev Aletleri Dış. Tic A.Ş. will Not be responsible of any problem if any repair or maintenance made by other than Fakir Services.

Technical data

Mains voltage	: 230 V~ 240 V
Nominal frequency	: 50 Hz
Power max	: 1600Watt max
HEPA	: 12
Usage life	: 10 years

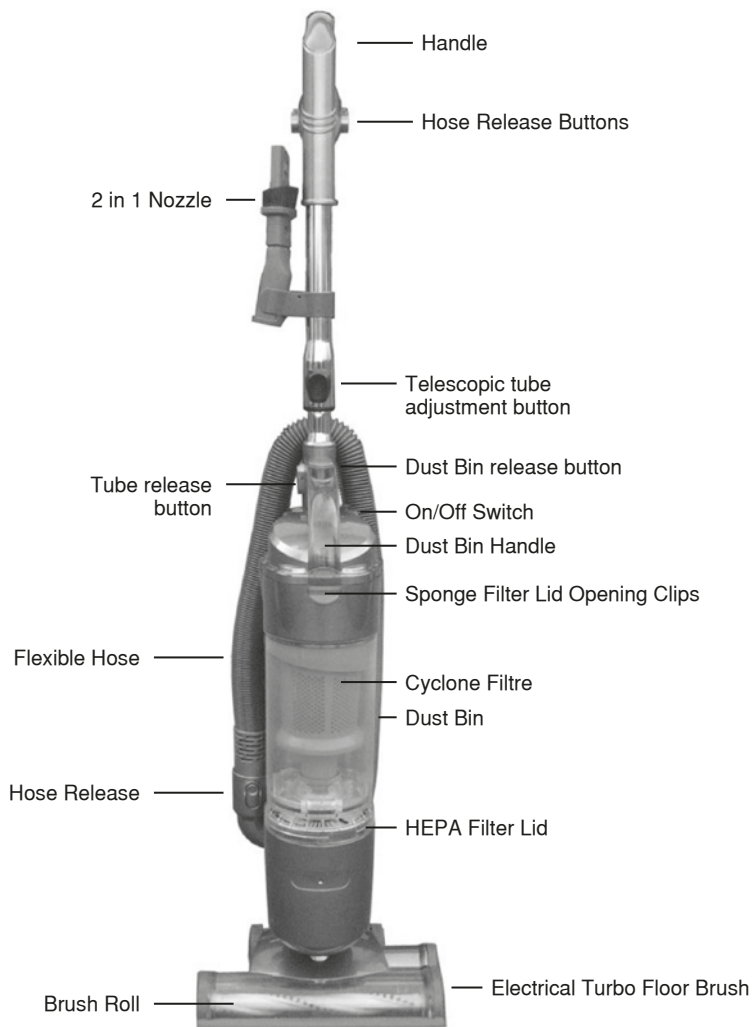

Unpacking

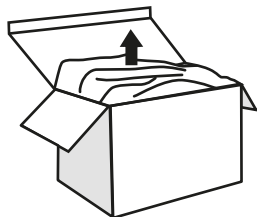

Unpack the device and check the content of the packaging for completeness (see scope of supply). Should you note any damage incurred during transit, please contact your dealer immediately.



WARNING!

Never use a defective appliance.



NOTICE!

Keep the packaging for storage and future transports (e.g. for moves, service).

Scope of delivery

Vacuum Cleaner	1
Turbo Vacuuming nozzle.....	1
2 in 1 crevice& furniture noozle.....	1
Instructions manual.....	1
Service List	1



WARNING!

Please ensure that the mains plug is disconnected before assembling the parts otherwise the appliance might start up unintentionally and cause injury.



WARNING!

Check the appliance and the power cable before use. Faulty appliances may cause injury and should not be used.



WARNING!

Follow the steps below as soon as you stop vacuum cleaning. Never leave the appliance unattended.



Assembly

1. Fix the handle onto the base body, and ensure the pin locks firmly into place.
2. Attach Turbo Floor Brush to the main body.
3. The handle can be adjusted to preferred length.



Operation

1. Rotate the cord hooks to release the power cable, unwind to ensure it is free of tangles and connect the plug to the mains power supply.
2. Gently rest one foot on the vacuum head and using your hand on the handle, lever back the main machine body.
3. The maneuverable body allows easy cleaning around furniture and other fixed objects.
4. When the main body on upright position, the roller brush would stop. That means, while you are using the flexible hose, turbo brush will be off and safe.
5. Always ensure to wind the power cord back on to the hooks and secure with clip when finished cleaning.





Using the flexible hose

1. Depress the buttons at the base of the hose to release the hose from the body of the cleaner and gently pull out of its holder.



2. Insert the hose into the hole under the handle and click into place.



3. Release the chrome handle from the body of the cleaner by depressing the button at the base of the chrome wand and gently pulling up the handle.



4. Place the 2 in 1 accessory on the end of the chrome wand. Use the crevice tool setting to help clean in tight spaces and the upholstery tool for sofas, curtains, etc.



WARNING!

Follow the steps below as soon as you stop vacuum cleaning. Never leave the appliance unattended.

Emptying the dust bin



The dust bin should only ever be removed after the power cable of the vacuum has been disconnected from the power supply. It should be emptied frequently to avoid unnecessary blockages that may lead to the failure of the motor.

1. Press the orange button at the top of the handle on the bin to disconnect the clear bin from the main body.



2. Using the handle hold the cleaner body over a rubbish bin/bag. Depress the orange clip located at the back of the bin to release the bottom of the bin and empty the contents.

Cleaning the filters



There are two filters used within the vacuum. One located at the top of the clear bin and the other underneath inside the main body.

1. The 'upper' filter should be washed each month and replaced every 6 months. Press the orange button at the top of the handle on the bin to disconnect the clear bin from the main body.

2. Lift the clip at the bottom of the handle to open the top cover of the bin. Take out the black filter frame and gently remove the inside filter.



3. Rinse the filter and frame under lukewarm water until the water runs clear. Allow the filter to dry completely before replacing.



4. To clean the 'bottom' HEPA filter press the orange button at the top of the handle on the bin to disconnect the clear bin from the main body and put to one side.



5. Twist the transparent plastic filter cover anti-clockwise to unlock. Take out the black filter frame and clean the filter inside with a soft brush.




NOTICE!

Only use original Fakir filters. This is the only way to ensure that the excellent filter properties of the vacuum cleaner are utilised.

Electrical Turbo Floor Brush

To clean the brush roll it is advised to first make sure that the cleaner is laid down flat or the cleaner head is removed to make for easier access. To clear any build-up of carpet or hair etc, use scissors or another suitable tool to clear the brush roll.

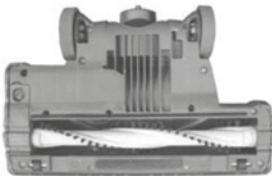

WARNING!


Switch off the vacuum cleaner and disconnect the plug from the main socket before cleaning the appliance. This ensures that the appliance is not switched on unintentionally.



CAUTION!

Do not use cleaning detergents, abrasive agents or alcohol as these will damage the casing. Only dry-wipe the appliance or clean with a damp cloth. You can also clean the filter chamber with a damp cloth if necessary. Nozzle should be regularly checked for blockages, cleaned and, washed and dried.

Waste disposal



If the service life of the device has ended, in particular if functional disturbances occur, make the worn-out device unusable by cutting through the power cable.

Dispose of the device according to the environmental regulations applicable in your country. Electrical waste must not be disposed of together with household waste. Bring the worn-out device to a collection center. The packaging of the device consists of recycling-capable materials. Place these, sorted out according to material, in the collectors provided, so that recycling can be carried out on them.

For advice on recycling, refer to your local authority or your dealer. Dispose of used dust bag and filters in domestic waste.

This appliance fulfills the requirements of the 2002/96/EG WEEE regulations.

If at once you don't succeed

Dear customer,

Our products are subject to strict quality control. If this device should not function trouble-free in spite of that, we regret this very much. Before you contact our Fakir Customer Service, check whether you can correct the fault yourself.

Malfunction	Possible cause	Solution
Appliance does not work	Plug is not plugged in or the appliance is not switched on. Socket does not carry any current. Power cable is damaged.	Plug in the plug or switch the appliance on Test the cylinder vacuum cleaner at another socket which you are sure carries current Have the cable replaced by authorized Fakir services
Appliance does not suck up any dirt	Dust container is full or blocked.	Clean the corresponding filter. Remove the blockage. If necessary,
Appliance is making unusually loud noises while running	Sucked-in particles are blocking the air-way.	Remove the particles. If necessary, use a long wooden rod for this (e. g. a broom handle).

Dispatch

Carry the appliance in the original package or a similar, well-padded package to prevent damage to the appliance.

This product is produced on behalf of Fakir Elektrikli Ev Aletleri Dış Ticaret A.Ş. by Kingclean Electric Co.,Ltd No.99 Zhufeng Road, Suzhou Wuzhong District, Jiangsu, China Tel: 0086 512 68258657



İmalatçı / İthalatçı Firma:

Fakir Elektrikli Ev Aletleri Dış. Tic. A.Ş.

Meşrutiyet Cad. No:43 Tepebaşı-İstanbul TÜRKİYE

Tel:(212) 249 70 69 (pbx) Fax:(212) 251 51 42